

DIMENSIONAL DATA

OVERALL DIMENSIONS AND PANEL CUTOUT

The dimensions are expressed in millimetres and inches (third-scale drawing).

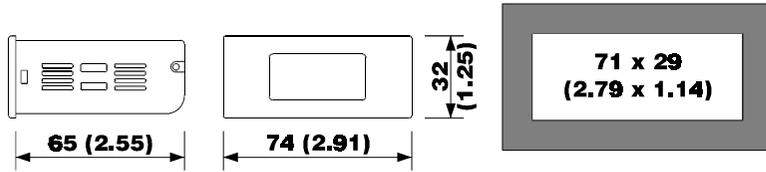


Fig. 3
ds3ve.wmf

INSTALLATION

WITH THE FIXING SYSTEMS SUGGESTED BY THE BUILDER

Panel mounting, with the equipped screw (Fig. 4) or spring brackets (Fig. 5) (third-scale drawing).

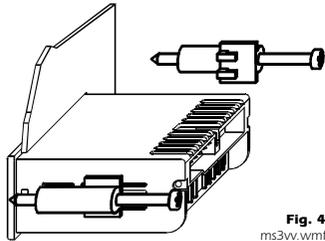


Fig. 4
ms3vv.wmf

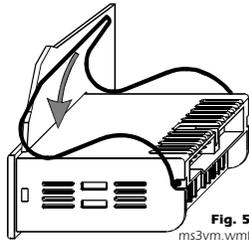


Fig. 5
ms3vm.wmf

ELECTRICAL CONNECTION

CONNECTIONS TO DERIVE

Instance of typical application.

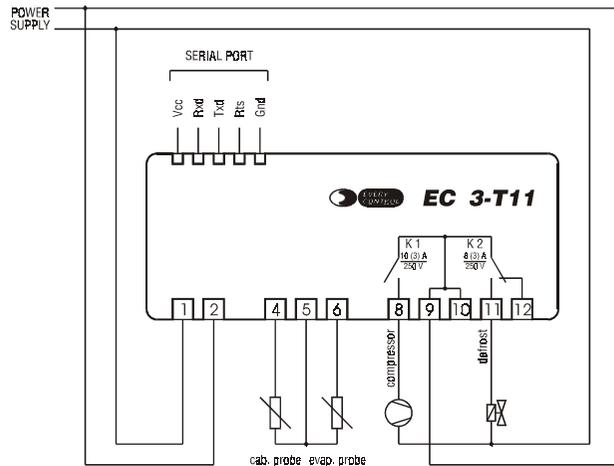


Fig. 6
c3t1e.wmf

BUILDER DATA

EVERY CONTROL S.r.l.

Via Mezzaterra 6, 32036 Sedico Belluno ITALY
Phone 0039/0437852468 (a.r.) Fax 0039/043783648
Internet addresses
e-mail: info@everycontrol.it
http://www.everycontrol.it

TO BE CAREFUL

This publication exclusively belongs to EVERY CONTROL and shall not be reproduced and distributed if not expressly authorized by the same EVERY CONTROL.

EVERY CONTROL does not assume any responsibility in order to the characteristics, to the technical data and to the possible mistakes related herein or deriving from the use of the same.

EVERY CONTROL can not be considered responsible for damages caused from the nonobservance of the additional informations.

EVERY CONTROL reserves the right to make any modification without prior notice and at any time without prejudice the basic functioning and safety characteristics.

EC 3-T11

ON-OFF digital thermostat for compressor and defrost (for temperature-time) management supplied from main voltage

Operating instructions

Release 2/00 of September the twenty-first 2000

Code EC 3-T11 DOC E001

File 3t11e.p65

IMPORTANT:

The use of this new instrument is easy; but for safety reasons, it is important read these instructions carefully before the installation or before the use and follow all additional informations.

It is very important keep these instructions with the instrument for future consultations.



Fig. 1
f3-t11.wmf

GENERAL INFORMATIONS

WHAT IS THE USE

EC 3-T11 is an ON-OFF digital thermostat studied for refrigerating systems management through the compressor and defrost (for temperature-time) management; the instrument can be supplied from main voltage (230 Vac).

In factory the instrument gets preset to accept at the measure inputs PTC/NTC probes used in refrigeration field at the moment.

Some parameters permit to set the thermostat to protect the compressor against overloads due to several starts repeated in a short time, to manage the defrost according with one's requirements, to signal working conditions outside the safety limits.

EC 3-T11 is available in the 74 x 32 mm (2.91 x 1.25 in.) case and it is studied for panel mounting with the equipped screw or spring brackets.

GETTING STARTED

INSTALLATION

EC 3-T11 was studied for panel mounting, panel cutout 71 x 29 mm (2.79 x 1.14 in.), with the equipped screw or spring brackets (the overall dimensions and the panel cutout are related in Fig. 3, the fixing systems suggested by the builder are related respectively in Fig. 4 and in Fig. 5).

ADDITIONAL INFORMATIONS

- the panel thickness must be included from 1 to 5 mm (0.04 to 0.19 in.)
- verify if the using conditions (ambient temperature, humidity, etc.) are within the limits indicated by the builder (see the chapter TECHNICAL DATA)
- install the instrument in a location with a suitable ventilation, to avoid the internal overheating of the instrument
- do not install the instrument near surfaces that can obstruct the air-grating (carpets, covers, etc.), heating sources (radiators, hot air ducts, etc.), locations subject to direct sunlight, rain, humidity, excessive dust, mechanical vibrations or bumps, devices with strong magnetos (microwave ovens, big speakers, etc.)
- according with the safety norms, the protection against possible contacts with electrical parts and parts protected with functional insulation only must be ensured through a correct installation procedure of the instrument; all parts that ensure the protection must be fixed so that they can not be removed if not with a tool
- if not differently specified at the time of order, the instrument will be equipped with screw brackets.

ELECTRICAL CONNECTION

EC 3-T11 is provided with three screw terminal blocks for cables up to 2.5 mm² (0.38 in.², for the connection to the power supply, measure inputs and outputs) and it is provided with one five poles single line male connector (for the connection to the CLONE configure/cloner and RICS supervision systems), located on the instrument back panel (the connections to derive are related in Fig. 6 and they are checkable on the polyester label stuck on the instrument case).

ADDITIONAL INFORMATIONS

- if the instrument is brought from a cold to a warm location, the humidity may condense inside the instrument; wait about an hour before supply the instrument
- verify if the operating power supply voltage, electrical frequency and power of the instrument correspond to the local power supply (see the chapter TECHNICAL DATA)
- do not supply more instruments with the same transformer
- if the instrument is installed on a vehicle, its power supply must be derived directly from the battery of the vehicle
- give the instrument a protection able to limit the current absorbed in case of failure
- the instrument remains connected to the local power supply as long as the terminals 1 and 2 are derived to the local power supply, even if the instrument is apparently turned off
- give the probes a protection able to insulate them against possible contacts with

metal parts or use insulated probes

- give the outputs a protection able to protect them against short circuit and overload
- do not try to repair the instrument; for the repairs apply to highly qualified staff
- if you have any questions or problems concerning the instrument please consult Every Control (see the chapter BUILDER DATA).

USE

PRELIMINARY INFORMATIONS

After derived the connections related in Fig. 6, during the normal functioning the instrument displays the temperature read by the cabinet probe.




Fig. 2
iu3t11.wmf

If an alarm should be active the instrument displays the alarm code flashing as long as the cause that has given it does not disappear (see the chapter SIGNALS AND ALARMS).

EC 3-T11 is provided with one working setpoint and with some configuration parameters that get stored in a non volatile memory and that permit to set the instrument according with one's requirements (see the chapter CONFIGURABILITY).

The output K 1 is associated to the compressor and to the working setpoint, it remains activated continuously as long as the temperature read by the cabinet probe reaches the working setpoint and when it rises above the working setpoint of the hysteresis value (differential) the output gets reactivated, except during a defrost and a dripping.

Passed the defrost interval from the moment of the instrument start or from the moment in which the instrument presents a request of a defrost cycle, if the conditions permit it (the temperature read by the evaporator probe must be below the defrost stopping setpoint) the instrument automatically presents the following request of a defrost cycle.

A defrost cycle provides two phases (defrost and dripping) connected in cascade since the end of one automatically determines the passage to the following one.

The output K 2 is associated to the defrost and it remains continuously activated during the defrost as long as the temperature read by the evaporator probe reaches the defrost stopping setpoint when the defrost ends and the instrument automatically moves to the dripping; if the instrument was set to manage defrost to resistances (electrical) during a defrost the output K 1 gets forced to the status OFF, if the instrument was set to manage hot gas defrost (reversal of cycle) during a defrost the output K 1 remains continuously activated.

Passed the dripping length from the moment of the defrost end the defrost cycle ends; during a dripping the output K 1 gets forced to the status OFF.

If the conditions permit it (the temperature read by the evaporator probe must be below the defrost stopping setpoint) keeping pushed the key T2 for four seconds at least the instrument presents a request of a defrost cycle.

WORKING SETPOINT SETTING (WORKING TEMPERATURE)

To modify the working setpoint value keep pushed the key T3 (the instrument displays the actual value) and at the same time push and release over and over the key T1 or T2 as long as the instrument displays the desired value (keeping pushed the key T1 or T2 the value gets decreased or increased more quickly); after the modification release the key T3 last; during the pressure of the key T3 the LED L1 flashes quickly to indicate that a working setpoint setting procedure is running (to the release of the key T3 the instrument automatically turns out from the working setpoint setting procedure).

ADDITIONAL INFORMATIONS

- for the whole period of a corrupted memory data alarm the access to the working setpoint setting procedure is refused
- the working setpoint is programmable within the limits established with the parameters T1 and T2

