

# EVBOX Light J200

## Control solutions for cold rooms with on-board moto-condensing unit



**PLEASE READ CAREFULLY**  
and save this document  
**CONSIDER THE ENVIRONMENT**



### 1 MEASUREMENTS AND INSTALLATION

- Measurements in mm (inches); to be fitted on-board, fixing screws not provided.
- Degree of protection IP65.
  - Power supply 230 VAC.
  - Incorporated clock (according to the model).
  - Cabinet probe and evaporator probe (PTC/NTC).
  - Door switch input.
  - Compressor relay 16 A res. @ 250 VAC or 30 A res. @ 250 VAC (according to the model).
  - Alarm buzzer.
  - Incorporated Bluetooth Low Energy sensor (according to the model).
  - TTL MODBUS slave port for EVconnect APP or BMS.

### 1 MEASUREMENTS AND INSTALLATION

Measurements in mm (inches); to be fitted on-board, fixing screws not provided.

- N.B.
- make sure to have a junction for rigid tube; the maximum diameter of the fixing hole must be 28.5 mm (1 1/8 in)
  - to ensure the degree of protection IP65 of the whole covering, install the device using the appropriate holes only.

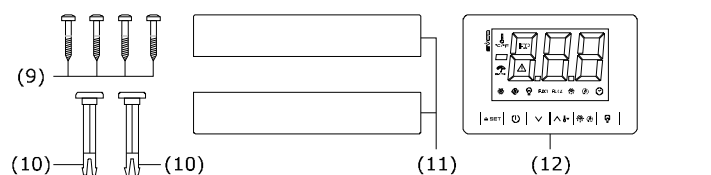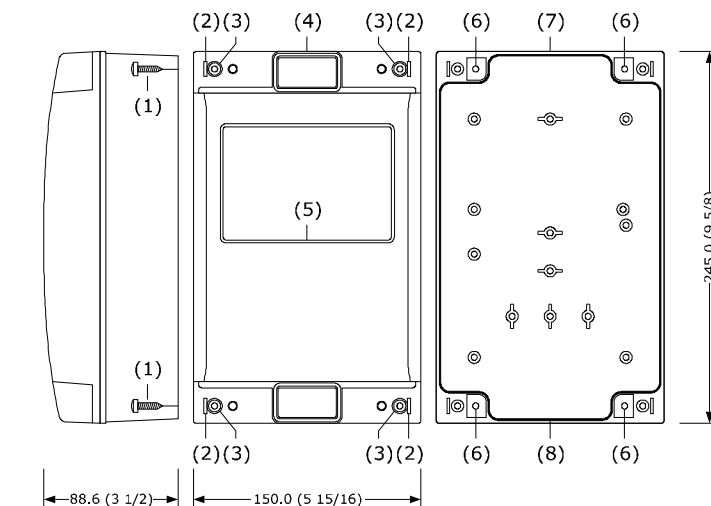


1. Fasten the back shell (7) to the wall with 4 screws (1) using the proper holes (6).
2. Make sure the gasket (8) is into the proper seat.
3. Lean the front shell (4) against the back shell (7) and insert the 2 fastening tabs (10) thoroughly in the proper holes (2) on the right-hand side or the left-hand side of the front shell (4).
4. Fasten the controller (12) pushing it from the front into the proper seat (5).
5. If the connecting cables come from above, drill a hole having a diameter suitable to fix a junction for rigid tube on the upper part of the back shell (7); if vice versa the cables come from below, drill the hole on the lower part of the shell.
6. Screw the junction for rigid tube to the back shell (7).
7. Connect the controller (12) as shown in the section **ELECTRICAL CONNECTION** getting the cables to pass through the junction for rigid tube.
8. Fasten the front shell (4) against the back shell (7) with 4 screws (9) using the proper holes (3).
9. Fasten the cover caps (11) on the upper part and on the lower part of the front shell (4).

### INSTALLATION PRECAUTIONS

- Ensure that the working conditions are within the limits stated in the **TECHNICAL SPECIFICATIONS** section.
- Do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks.
- In compliance with safety regulations, the device must be installed properly to ensure adequate protection from contact with electrical parts. All protective parts must be fixed in such a way as to need the aid of a tool to remove them.

### 2 ELECTRICAL CONNECTION

- N.B.
- Use cables of an adequate section for the current running through them.
  - To reduce any electromagnetic interference connect the power cables as far away as possible from the signal cables.

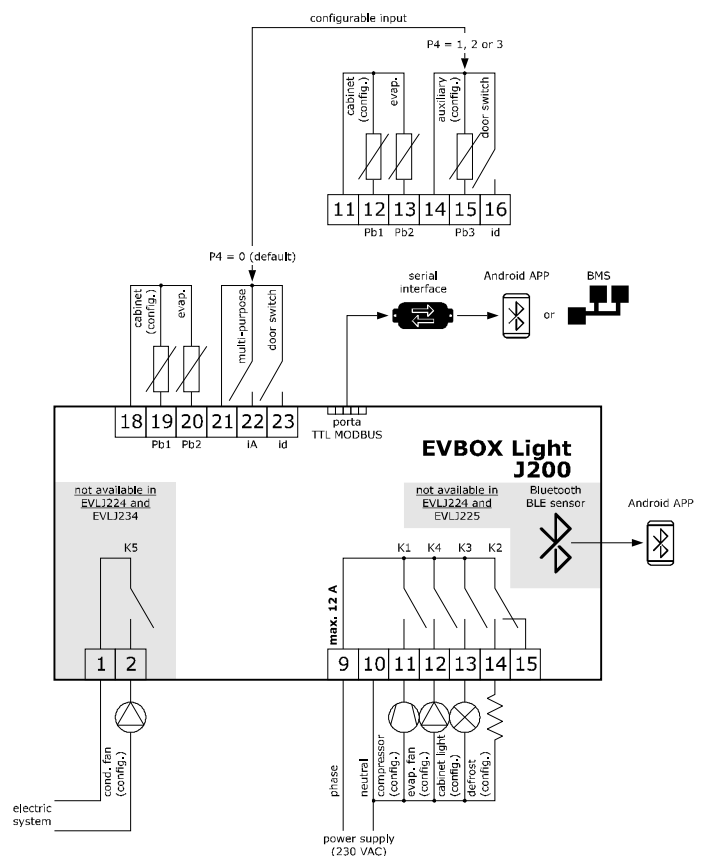

### PRECAUTIONS FOR ELECTRICAL CONNECTION

- If using an electrical or pneumatic screwdriver, adjust the tightening torque.
- If the device has been moved from a cold to a warm place, the humidity may have caused condensation to form inside. Wait about an hour before switching on the power.
- Make sure that the supply voltage, electrical frequency and power are within the set limits. See the section **TECHNICAL SPECIFICATIONS**.
- Disconnect the power supply before doing any type of maintenance.
- Do not use the device as safety device.
- For repairs and for further information, contact the EVCO sales network.


### 3 FIRST-TIME USE

1. Install following the instructions given in the section **MEASUREMENTS AND INSTALLATION**.
  2. Power up the device and an internal test will be run. The test normally takes a few seconds, when it is finished the display will switch off.
  3. Configure the device as shown in the section **Setting configuration parameters**. Recommended configuration parameters for first-time use.
- | PAR. | DEF. | PARAMETER                       | MIN...                 | MAX.        |
|------|------|---------------------------------|------------------------|-------------|
| SP   | 0.0  | setpoint                        | r1... r2               |             |
| P0   | 1    | probe type                      | 0 = PTC                | 1 = NTC     |
| P2   | 0    | temperature unit of measurement | 0 = °C                 | 1 = °F      |
| d1   | 0    | defrost type                    | 0 = electric           | 1 = hot gas |
|      |      |                                 | 2 = compressor stopped |             |

Then check that the remaining settings are appropriate; see the section **CONFIGURATION PARAMETERS**.

4. Disconnect the device from the mains.
5. Make the electrical connection as shown in the section **ELECTRICAL CONNECTION** without powering up the device.
6. For the connection in an RS-485 network connect the interface EVIF22TSX or EVIF23TSX, to activate real time functions in EVLJ224 and EVLJ225 connect the module EVIF23TSX, to use the device with the Android APP EVconnect connect the interface EVIF25TBX (or use EVLJ234 or EVLJ235); see the relevant instruction sheets. **If EVIF22TSX or EVIF23TSX is used, set parameter bLE to 0.**
7. Power up the device.

### 4 USER INTERFACE AND MAIN FUNCTIONS

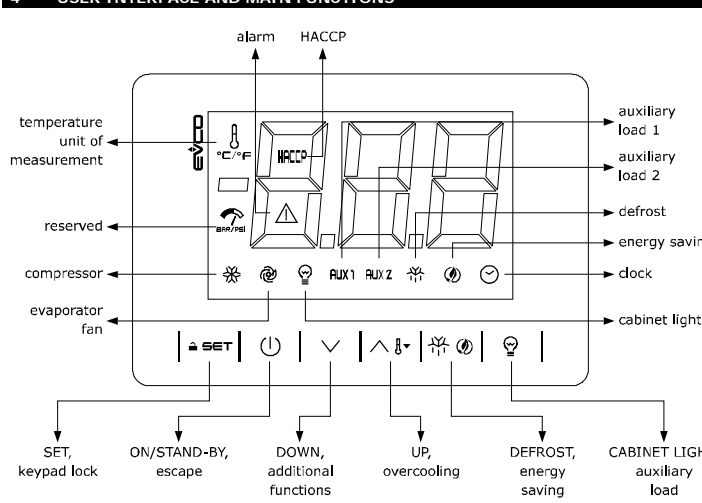

#### 4.1 Switching the device on and off

1. If POF = 1 (default), touch the ON/STAND-BY key for 2s. If the device is switched on, the display will show the P5 value ("cabinet temperature" default); if the display shows an alarm code, see the section **ALARMS**.

LED	ON	OFF	FLASHING
	compressor on	compressor off	- compressor protection active - setpoint being set
	evaporator fan on	evaporator fan off	evaporator fan stop active
	cabinet light on	cabinet light off	cabinet light on by digital input
<b>AUX 1</b>	auxiliary function 1 on	auxiliary function 1 off	- auxiliary function 1 on by digital input - auxiliary function 1 delay active
<b>AUX 2</b>	auxiliary function 2 on	auxiliary function 2 off	- auxiliary function 2 on by digital input - auxiliary function 2 delay active
	defrost or pre-drip active	-	- defrost delay active - dripping active
	- energy saving active - low consumption active	-	-

	view time	-	set date, time and day of the current week
	view temperature	-	overcooling or overheating active
<b>HACCP</b>	saved HACCP alarm	-	new HACCP alarm saved
	alarm active	-	-

If Loc = 1 (default) and 30s have elapsed without the keys being pressed, the display will show the "Loc" label and the keypad will lock automatically.

#### 4.2 Unlock keypad

Touch a key for 1s: the display will show the label "UnL".

#### 4.3 Set the setpoint (if r3 = 0, default)

Check that the keypad isn't locked.

1. Touch the SET key.
2. Touch the UP or DOWN key within 15s to set the value within the limits r1 and r2 (default "-40... 50").
3. Touch the SET key (or do not operate for 15s).

#### 4.4 Activate manual defrost (if r5 = 0, default)

Check that the keypad is not locked and that overcooling is not active.

1. Touch the DEFROST key for 2s.
- If P3 = 1 (default), defrost is activated provided that the evaporator temperature is lower than the d2 threshold.

#### 4.5 Cabinet light on/off (if u1c... u5c = 5)

1. Touch the CABINET LIGHT key.

#### 4.6 Button-operated load on/off (if u1c... u5c = 10 or 11)

1. Touch the CABINET LIGHT key (for 2s if u1c... u5c = 5).

If u1c... u5c = 6, the demisting switch on for the u6 duration.

#### 4.7 Silence buzzer (if u9 = 1, default)

Touch a key.

If u1c... u5c = 11 and u4 = 1, the alarm output is deactivated.

### 5 ADDITIONAL FUNCTIONS

#### 5.1 Activate/deactivate overcooling and overheating

Check that the keypad is not locked.

1. Touch the UP key for 2s.

FUNCTION	CONDITION	CONSEQUENCE
overcooling	r5 = 0 and defrost not active	the setpoint becomes "setpoint - r6", for the r7 duration
overheating	r5 = 1	the setpoint becomes "setpoint + r6", for the r7 duration

#### 5.2 Activate/deactivate energy saving in manual mode (if r5 = 0)

Check that the keypad is not locked.

1. Touch the DEFROST key.

The setpoint becomes "setpoint + r4", at maximum for HE2 duration.

#### 5.3 Activate the high or low humidity functions (if F0 = 5)

Check that the keypad isn't locked.

1. Touch the DOWN key for 1s.
2. Touch the UP or DOWN key within 15s to select the label "rH".
3. Touch the SET key for 2s until the display shows the right label for the function (only touch the key to see the function activated).

LAB.	DESCRIPTION
rhL	low humidity function (evaporator fan with F17 and F18 if the compressor is off, on if the compressor is on)
rhH	high humidity function (evaporator fan on)

4. Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

#### 5.4 View/delete HACCP alarm information (not available in EVLJ224 and EVLJ225)

Check that the keypad isn't locked.

1. Touch the DOWN key for 1s.
2. Touch the UP or DOWN key within 15s to select a label.

LAB.	DESCRIPTION
LS	view HACCP alarm information
rLS	delete HACCP alarm information

3. Touch the SET key.
4. Touch the UP or DOWN key to select an alarm code (to select label "LS" or to set "149" (to select label "rLS").

COD.	DESCRIPTION
AL	low temperature alarm
AH	high temperature alarm
id	open door alarm (if i4 = 1)
PF	power failure alarm (available in EVLJ234 and EVLJ235 or in EVLJ224 and EVLJ225 with interface EVIF25TBX connected)

5. Touch the SET key.
6. Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

Example of alarm information (e.g. a high temperature alarm).

<b>8.0</b>	critical value (calculated cabinet/product temperature) was 8.0 °C/°F
<b>Sta</b>	(available in EVLJ234 and EVLJ235 or in EVLJ224 and EVLJ225 with interface EVIF25TBX connected)
<b>y15</b>	alarm signalled in 2015
<b>n03</b>	alarm signalled in March
<b>d26</b>	alarm signalled on 26 March 2015
<b>h16</b>	alarm signalled at 16:00
<b>n30</b>	alarm signalled at 16:30
<b>dur</b>	
<b>h01</b>	alarm lasted 1h
<b>n15</b>	alarm lasted 1h 15min

#### 5.5 View/delete compressor functioning hours

Check that the keypad isn't locked.

1. Touch the DOWN key for 1s.
2. Touch the UP or DOWN key within 15s to select a label.

LAB.	DESCRIPTION
CH1	view compressor functioning hundreds of hours
CH2	view second compressor functioning hundreds of hours (if u1c... u5c = 1)
rCH	delete compressor and second compressor functioning hours

3.		Touch the SET key.
4.		Touch the UP or DOWN key to set "149" (to select rCH).
5.		Touch the SET key.
6.		Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

**5.6 View the temperature detected by the probes**

Check that the keypad isn't locked.

1.		Touch the DOWN key for 1s.										
2.		Touch the UP or DOWN key within 15s to select a label.										
<table border="1"> <thead> <tr> <th>LAB.</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>Pb1</td> <td>cabinet temperature (if P4 = 0, 1 or 2) inlet air temperature (if P4 = 3)</td> </tr> <tr> <td>Pb2</td> <td>evaporator temperature (if P3 = 1 or 2)</td> </tr> <tr> <td>Pb3</td> <td>auxiliary temperature (if P4 = 1, 2 or 3)</td> </tr> <tr> <td>Pb4</td> <td>calculated product temperature (CPT: if P4 = 3)</td> </tr> </tbody> </table>		LAB.	DESCRIPTION	Pb1	cabinet temperature (if P4 = 0, 1 or 2) inlet air temperature (if P4 = 3)	Pb2	evaporator temperature (if P3 = 1 or 2)	Pb3	auxiliary temperature (if P4 = 1, 2 or 3)	Pb4	calculated product temperature (CPT: if P4 = 3)	
LAB.	DESCRIPTION											
Pb1	cabinet temperature (if P4 = 0, 1 or 2) inlet air temperature (if P4 = 3)											
Pb2	evaporator temperature (if P3 = 1 or 2)											
Pb3	auxiliary temperature (if P4 = 1, 2 or 3)											
Pb4	calculated product temperature (CPT: if P4 = 3)											
3.		Touch the SET key.										
4.		Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.										

**6 SETTINGS**

**6.1 Setting configuration parameters**

1.		Touch the SET key for 4s: the display will show the label "PA".
2.		Touch the SET key.
3.		Touch the UP or DOWN key within 15s to set the PAS value (default "19").
4.		Touch the SET key (or do not operate for 15s): the display will show the label "SP".
5.		Touch the UP or DOWN key to select a parameter.
6.		Touch the SET key.
7.		Touch the UP or DOWN key within 15s to set the value.
8.		Touch the SET key (or do not operate for 15s).
9.		Touch the SET key for 4s (or do not operate for 60s) to exit the procedure.

**6.2 Set the date, time and day of the week (available in EVLJ234 and EVLJ235 or in EVLJ224 and EVLJ225 with interface EVIF25TBX connected)**

N.B.	
- If the device is connected to the interface EVIF25TBX, do not disconnect the device from the mains within two minutes since the setting of the time and day of the week.	
- If the device communicates with the APP EVconnect, the date, time and day of the week will automatically be set by the smartphone or tablet.	

Check that the keypad isn't locked.

1.		Touch the DOWN key for 1s.																
2.		Touch the UP or DOWN key within 15s to select the label "rtc".																
3.		Touch the SET key: the display will show the label "y" followed by the last two figures of the year.																
4.		Touch the UP or DOWN key within 15s to set the year.																
5.	Repeat actions 3 and 4 to set the next labels.																	
<table border="1"> <thead> <tr> <th>LAB.</th> <th>MEANING OF THE NUMBERS FOLLOWING THE LABEL</th> </tr> </thead> <tbody> <tr> <td>n</td> <td>month (01... 12)</td> </tr> <tr> <td>d</td> <td>day (01... 31)</td> </tr> <tr> <td>h</td> <td>time (00... 23)</td> </tr> <tr> <td>n</td> <td>minutes (00... 59)</td> </tr> </tbody> </table>		LAB.	MEANING OF THE NUMBERS FOLLOWING THE LABEL	n	month (01... 12)	d	day (01... 31)	h	time (00... 23)	n	minutes (00... 59)							
LAB.	MEANING OF THE NUMBERS FOLLOWING THE LABEL																	
n	month (01... 12)																	
d	day (01... 31)																	
h	time (00... 23)																	
n	minutes (00... 59)																	
6.		Touch the SET key: the display will show the label for the day of the week.																
7.		Touch the UP or DOWN key within 15s to set the day of the week.																
<table border="1"> <thead> <tr> <th>LAB.</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>Mon</td> <td>Monday</td> </tr> <tr> <td>tuE</td> <td>Tuesday</td> </tr> <tr> <td>UEd</td> <td>Wednesday</td> </tr> <tr> <td>thu</td> <td>Thursday</td> </tr> <tr> <td>Fri</td> <td>Friday</td> </tr> <tr> <td>Sat</td> <td>Saturday</td> </tr> <tr> <td>Sun</td> <td>Sunday</td> </tr> </tbody> </table>		LAB.	DESCRIPTION	Mon	Monday	tuE	Tuesday	UEd	Wednesday	thu	Thursday	Fri	Friday	Sat	Saturday	Sun	Sunday	
LAB.	DESCRIPTION																	
Mon	Monday																	
tuE	Tuesday																	
UEd	Wednesday																	
thu	Thursday																	
Fri	Friday																	
Sat	Saturday																	
Sun	Sunday																	
8.		Touch the SET key: the device will exit the procedure.																
9.		Touch the ON/STAND-BY key to exit the procedure beforehand.																

**6.3 Reset the factory settings**

N.B.	
Check that the factory settings are appropriate; see the section <i>CONFIGURATION PARAMETERS</i> .	

1.		Touch the SET key for 4s: the display will show the label "PA".
2.		Touch the SET key.
3.		Touch the UP or DOWN key within 15s to set "149".
4.		Touch the SET key (or do not operate for 15s): the display will show the label "dEF".
5.		Touch the SET key.
6.		Touch the UP or DOWN key within 15s to set "1".
7.		Touch the SET key (or do not operate for 15s).
8.	Interrupt the power supply to the device.	
9.		Touch the SET key for 2s before action 6 to exit the procedure beforehand.

**7 CONFIGURATION PARAMETERS**

N.	PAR.	DEF.	SETPOINT	MIN... MAX.
1	SP	0.0	setpoint	r1... r2
N.	PAR.	DEF.	ANALOGUE INPUTS	
2	CA1	0.0	cabinet probe offset	-25... 25 °C/°F if P4 = 3, air in probe offset
3	CA2	0.0	evaporator probe offset	-25... 25 °C/°F
4	CA3	0.0	auxiliary probe offset	-25... 25 °C/°F
5	PO	1	probe type	0 = PTC 1 = NTC
6	P1	1	enable °C decimal point	0 = no 1 = yes
7	P2	0	temperature unit of measurement	0 = °C 1 = °F
8	P3	1	evaporator probe function	0 = disabled 1 = defrost + fan 2 = fan

N.	PAR.	DEF.	REGULATION	MIN... MAX.
9	P4	0	configurable input function	0 = digital input 1 = condenser probe 2 = critical temperature probe 3 = air out probe 4 = evaporator 2 probe if P4 = 3, regulation temperature = product temperature (CPT)
10	P5	0	value displayed	0 = regulation temperature 1 = setpoint 2 = evaporator temperature 3 = auxiliary temperature 4 = air in temperature
11	P7	50	inlet air weight for calculated product temperature (CPT)	0... 100 % CPT = {[(P7 x (inlet air T)) + ((100 - P7) x (outlet air T)) : 100]}
12	P8	5	display refresh time	0... 250 s : 10
N.	PAR.	DEF.	COMPRESSOR	
13	r0	2.0	setpoint differential	1... 15 °C/°F if u1c... u5c 1, proportional band
14	r1	-40	minimum setpoint	-99 °C/°F... r2
15	r2	50.0	maximum setpoint	r1... 199 °C/°F
16	r3	0	enable setpoint block	0 = no 1 = yes
17	r4	0.0	setpoint offset in energy saving	0... 99 °C/°F
18	r5	0	cooling or heating operation	0 = cooling 1 = heating
19	r6	0.0	setpoint offset in overcooling/overheating	0... 99 °C/°F
20	r7	0	overcooling/overheating duration	0... 240 min
21	r12	1	position of the r0 differential	0 = asymmetric 1 = symmetric
N.	PAR.	DEF.	DEFROST (if r5 = 0)	
22	C0	0	compressor on delay after power-on	0... 240 min
23	C1	5	delay between 2 compressor switch-ons	0... 240 min
24	C2	3	compressor off minimum time	0... 240 min
25	C3	0	compressor on minimum time	0... 240 s
26	C4	10	compressor off time during cabinet probe alarm	0... 240 min
27	C5	10	compressor on time during cabinet probe alarm	0... 240 min
28	C6	80.0	threshold for high condensation warning	0... 199 °C/°F differential = 2 °C/4 °F
29	C7	90.0	threshold for high condensation alarm	0... 199 °C/°F
30	C8	1	high condensation alarm delay	0... 15 min
31	C10	0	compressor hours for service	0... 999 h x 100 0 = disabled
32	C11	10	compressor 2 on delay	0... 240 s
33	C12	2	compressor hours weight for balancing hours and switch-ons (BHC)	0... 10 BHC = {[C12 x (compressor hours)] + [C13 x (compressor switch-ons)]}
34	C13	1	compressor hours switch-ons for balancing hours and switch-ons (BHC)	0... 10 BHC = {[C12 x (compressor hours)] + [C13 x (compressor switch-ons)]}
35	C14	1	tie between compressors	0 = according to C11 1 = according to r0
N.	PAR.	DEF.	DEFROST (if r5 = 0)	
36	d0	8	automatic defrost interval	0... 99 h 0 = only manual if d8 = 3, maximum interval
37	d1	0	defrost type	0 = electric 1 = hot gas 2 = compressor stopped
38	d2	2.0	threshold for defrost end	-99... 99 °C/°F
39	d3	30	defrost duration	0... 99 min se P3 = 1, maximum duration
40	d4	0	enable defrost at power-on	0 = no 1 = yes
41	d5	0	defrost delay after power-on	0... 99 min
42	d6	1	value displayed during defrost	0 = regulation temperature 1 = display locked 2 = dEF label
43	d7	2	dripping time	0... 15 min
44	d8	0	defrost interval counting mode	0 = device on hours 1 = compressor on hours 2 = hours evaporator temperature < d9 3 = adaptive (if P4 = 4, device on hours) 4 = real time
45	d9	0.0	evaporation threshold for automatic defrost interval counting	-99... 99 °C/°F
46	d11	0	enable defrost timeout alarm	0 = no 1 = yes
47	d15	0	compressor on consecutive time for hot gas defrost	-20... 99 min if negative values, duration dripping heater on
48	d16	0	pre-dripping time for hot gas defrost	0... 99 min
49	d18	40	adaptive defrost interval	0... 999 min if compressor on + evaporator temperature < d22 0 = only manual
50	d19	3.0	threshold for adaptive defrost (relative to optimal evaporation temperature)	0... 40 °C/°F optimal evaporation temperature - d19
51	d20	180	compressor on consecutive time for defrost	0... 999 min 0 = disabled
52	d21	200	compressor on consecutive time for defrost after power-on and overcooling	0... 500 min if (regulation temperature - setpoint) > 10°C/20 °F 0 = disabled
53	d22	-2.0	evaporation threshold for adaptive defrost interval counting (relative to optimal evaporation temperature)	-10... 10 °C/°F optimal evaporation temperature + d22
54	d25	0	enable air out probe for defrost during evaporator probe alarm	0 = no 1 = yes
55	d26	6	defrost interval during evaporator probe alarm	0... 99 h 0 = only manual if d25 = 1
N.	PAR.	DEF.	ALARMS	
56	A0	0	select value for high/low temperature alarms	0 = regulation temperature 1 = evaporator temperature
57	A1	0.0	threshold for low temperature alarm	-99... 99 °C/°F
58	A2	0	low temperature alarm type	0 = disabled 1 = relative to setpoint 2 = absolute
59	A4	0.0	threshold for high temperature alarm	-99... 99 °C/°F
60	A5	0	high temperature alarm type	0 = disabled 1 = relative to setpoint 2 = absolute
61	A6	120	high temperature alarm delay after power-on	0... 240 min
62	A7	15	high/low temperature alarms delay	0... 240 min

N.	PAR.	DEF.	FANS	MIN... MAX.
63	A8	15	high temperature alarm delay after defrost	0... 240 min
64	A9	15	high temperature alarm delay after door closing	0... 240 min
65	A10	10	power failure duration for alarm recording (not available in EVLJ224 and EVLJ225)	0... 240 min
66	A11	2.0	high/low temperature alarms reset differential	1... 15 °C/°F
67	A12	1	power failure alarm notification type (not available in EVLJ224 and EVLJ225)	0 = HACCP LED 1 = HACCP LED + PF label + buzzer 2 = HACCP LED + PF label + buzzer (if duration > A10)
N.	PAR.	DEF.	FANS	
68	F0	1	evaporator fan mode during normal operation	0 = off 1 = on 2 = on if compressor on 3 = thermoregulated (with regulation temperature + F1) 4 = thermoregulated (with regulation temperature + F1) if compressor on 5 = according to F6 6 = thermoregulated (with F1) 7 = thermoregulated (with F1) if compressor on
69	F1	-4.0	threshold for evaporator fan operation	-99... 99 °C/°F
70	F2	0	evaporator fan mode during defrost and dripping	0 = off 1 = on 2 = according to F0
71	F3	2	evaporator fan off maximum time	0... 15 min
72	F4	30	evaporator fan off time during energy saving	0... 240 s x 10 if F0 ≠ 5
73	F5	30	evaporator fan on time during energy saving	0... 240 s x 10 if F0 ≠ 5
74	F6	0	high/low humidity operation	0 = low humidity (with F17 and F18 if compressor off, on if compressor on) 1 = high humidity (on)
75	F7	5.0	threshold for evaporator fan on after dripping (relative to setpoint)	-99... 99 °C/°F setpoint + F7
76	F8	2.0	threshold for evaporator fan operation differential	1... 15 °C/°F
77	F9	10	evaporator fan off delay after compressor off	0... 240 s if F0 = 2 or 5
78	F10	1	condenser fan mode	0 = thermoregulated (with F11) 1 = thermoregulated (with F11) if compressor off, on if compressor on 2 = thermoregulated (with F11) if compressor on, off during defrost, pre-dripping and dripping
79	F11	15.0	threshold for condenser fan on	0... 99 °C/°F differential = 2 °C/4 °F
80	F12	30	condenser fan off delay after compressor off	0... 240 s if P4 ≠ 1
81	F17	60	evaporator fan off time with low humidity	0... 240 s
82	F18	10	evaporator fan on time with low humidity	0... 240 s
N.	PAR.	DEF.	DIGITAL INPUTS	
83	i0	5	door switch input function	0 = disabled 1 = compressor + evaporator fan off 2 = evaporator fan off 3 = cabinet light on 4 = compressor + evaporator fan off, cabinet light on 5 = evaporator fan off + cabinet light on
84	i1	0	door switch input activation	0 = with contact closed 1 = with contact open
85	i2	30	open door alarm delay	-1... 120 min -1 = disabled
86	i3	15	regulation inhibition maximum time with door open	-1... 120 min -1 = until the closing
87	i4	0	enable open door alarm recording	0 = no 1 = yes if i2 ≠ -1 and after i2
88	i5	8	multi-purpose input function	0 = disabled 1 = energy saving 2 = IA alarm 3 = ISd alarm 4 = button-operated load 1 on 5 = button-operated load 2 on 6 = device on/off 7 = LP alarm 8 = C11 alarm 9 = C21 alarm
89	i6	0	multi-purpose input activation	0 = with contact closed 1 = with contact open
90	i7	0	multi-purpose input alarm delay	0... 120 min if i5 = 3 or 7, compressor on delay after alarm reset
91	i8	0	number of multi-purpose input activations for high pressure alarm	0... 15 0 = disabled if i5 = 3
92	i9	240	reset counter time for high pressure alarm	1... 999 min
93	i10	0	door closed consecutive time for energy saving	0... 999 min after regulation temperature < SP 0 = disabled
94	i13	180	number of door openings for defrost	0... 240 0 = disabled
95	i14	32	door open consecutive time for defrost	0... 240 min 0 = disabled
N.	PAR.	DEF.	DIGITAL OUTPUTS	
96	u1c	0	relay K1 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2

97	u2c	4	relay K2 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2
98	u3c	5	relay K3 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2
99	u4c	2	relay K4 configuration	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2
100	u5c	3	relay K5 configuration (not available in EVLJ224 and EVLJ234)	0 = first compressor 1 = second compressor 2 = evaporator fan 3 = condenser fan 4 = defrost 5 = cabinet light 6 = demisting 7 = door heaters 8 = heater for neutral zone 9 = dripping heater 10 = button-operated load 1 11 = button-operated load 2 12 = alarm 13 = on/stand-by 14 = evaporator fan 2 15 = defrost 2
101	u2	0	enable cabinet light and button-operated load in stand-by	0 = no 1 = yes manual
102	u4	1	enable alarm output off silencing the buzzer	0 = no 1 = yes
103	u5	-1.0	threshold for door heaters on	-99... 99 °C/°F differential = 2 °C/4 °F
104	u6	5	demisting on duration	1... 120 min
105	u7	-5.0	neutral zone threshold for heating (relative to setpoint)	-99... 99 °C/°F differential = 2 °C/4 °F setpoint + u7
106	u9	1	enable alarm buzzer	0 = no 1 = yes
N.	PAR.	DEF.	REAL TIME CLOCK	MIN... MAX.
107	Hr0	0	enable clock (default 0 in EVLJ224 and EVLJ225)	0 = no 1 = yes
N.	PAR.	DEF.	ENERGY SAVING (if r5 = 0)	MIN... MAX.
108	HE2	0	energy saving maximum duration	0... 999 min
N.	PAR.	DEF.	REAL TIME ENERGY SAVING (if r5 = 0)	MIN... MAX.
109	H01	0	energy saving time	0... 23 h
110	H02	0	energy saving maximum duration	0... 24 h
N.	PAR.	DEF.	REAL TIME DEFROST (if d8 = 4)	MIN... MAX.
111	Hd1	h-	1st daily defrost time	h = disabled
112	Hd2	h-	2nd daily defrost time	h = disabled
113	Hd3	h-	3rd daily defrost time	h = disabled
114	Hd4	h-	4th daily defrost time	h = disabled
115	Hd5	h-	5th daily defrost time	h = disabled
116	Hd6	h-	6th daily defrost time	h = disabled
N.	PAR.	DEF.	RESERVED	MIN... MAX.
117	Sd0	- - -	reserved	reserved
118	Sd1	- - -	reserved	reserved
119	Sd2	- - -	reserved	reserved
120	Sd3	- - -	reserved	reserved
121	Sd4	- - -	reserved	reserved
122	Sd5	- - -	reserved	reserved
N.	PAR.	DEF.	SAFETIES	MIN... MAX.
123	POF	1	enable ON/STAND-BY key	0 = no 1 = yes
124	Loc	1	enable keypad lock	0 = no 1 = yes
125	PAS	-19	password	-99... 999
126	PA1	426	level 1 password	-99... 999
127	PA2	824	level 2 password	-99... 999
N.	PAR.	DEF.	DATA-LOGGING EVLINK	MIN... MAX.
128	rE0	60	data-logger sampling interval	0... 240 min
129	rE1	4	recorded temperature	0 = none 1 = cabinet 2 = evaporator 3 = auxiliary 4 = cabinet and evaporator 5 = all
N.	PAR.	DEF.	MODBUS	MIN... MAX.
130	LA	247	MODBUS address	1... 247
131	Lb	2	MODBUS baud rate	0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud
132	LP	2	parity	0 = none 1 = odd 2 = even
N.	PAR.	DEF.	BLUETOOTH	MIN... MAX.
133	bLE	1	enable Bluetooth	0 = no 1 = yes

8 ALARMS			
COD.	DESCRIPTION	RESET	TO CORRECT
Pr1	cabinet probe alarm	automatic	- check P0
Pr2	evaporator probe alarm	automatic	- check probe integrity
Pr3	auxiliary probe alarm	automatic	- check electrical connection
rtc	clock alarm	manual	set date, time and day of the week
AL	low temperature alarm	automatic	check A0, A1 and A2
AH	high temperature alarm	automatic	check A4 and A5
id	open door alarm	automatic	check i0 and i1
PF	power failure alarm	manual	- touch a key - check electrical connection
COH	high condensation warning	automatic	check C6
CSd	high condensation alarm	manual	- switch the device off and on - check C7
iA	multi-purpose input alarm	automatic	check i5 and i6
iSd	high pressure alarm	manual	- switch the device off and on - check i5, i6, i8, i9
LP	low pressure alarm	automatic	check i5 and i6
C1t	compressor thermal switch alarm	automatic	check i5 and i6
C2t	second compressor thermal switch alarm	automatic	check i5 and i6
dFd	defrost timeout alarm	manual	- touch a key - check d2, d3 and d11

9 TECHNICAL SPECIFICATIONS			
Purpose of the control device		Function controller	
Construction of the control device		Built-in electronic device	
Container		White, self-extinguishing	
Category of heat and fire resistance		D	
Measurements		150.0 x 245.0 x 88.6 mm (5 5/16 x 9 5/8 x 3 1/2 in)	
Mounting methods for the control device		To be fitted on-board, fixing screws not provided	
Degree of protection provided by the covering		IP65	
Connection method		Micro-MaTch connector	
Fixed screw terminal blocks for wires up to 2.5 mm <sup>2</sup>		Micro-MaTch connector	
Maximum permitted length for connection cables			
Power supply: 10 m (32.8 ft)		Analogue inputs: 10 m (32.8 ft)	
Digital inputs: 10 m (32.8 ft)		Digital outputs: 10 m (32.8 ft)	
Operating temperature		From -5 to 55 °C (from 23 to 131 °F)	
Storage temperature		From -25 to 70 °C (from -13 to 158 °F)	
Operating humidity		Relative humidity without condensate from 10 to 90%	
Pollution status of the control device		2	
Conformity			
RoHS 2011/65/CE	WEEE 2012/19/EU	REACH (EC) Regulation 1907/2006	
EMC 2014/30/UE		LVD 2014/35/UE	
Power supply			
230 VAC (+10% -15%), 50/60 Hz (±3 Hz), max. 6 VA insulated		115... 230 VAC (+10% -15%), 50/60 Hz (±3 Hz), max. 6 VA insulated in EVLJ225 with compressor relay rated 16 A res. @ 250 VAC	
Earthing methods for the control device			
Rated impulse-withstand voltage		2.5 KV	
Over-voltage category			
Software class and structure		A	
Clock			
Clock drift		≤ 60 s/month at 25 °C (77 °F)	
Clock battery autonomy in the absence of a power supply		> 24 h at 25 °C (77 °F)	
Clock battery charging time		24 h (the battery is charged by the power supply of the device)	
Analogue inputs			
2 for PTC or NTC probes (cabinet probe and evaporator probe)			
PTC probes	Sensor type	KTY 81-121 (990 Ω @ 25 °C, 77 °F)	
	Measurement field	From -50 to 150 °C (from -58 to 302 °F)	
NTC probes	Sensor type	B3435 (10 K Ω @ 25 °C, 77 °F)	
	Measurement field	From -40 to 105 °C (from -40 to 221 °F)	
Resolution	0.1 °C (1 °F)		
	0.1 °C (1 °F)		
Digital inputs			
Dry contact		Contact type	5 VDC, 2 mA
		Power supply	None
		Protection	None
Other inputs			
Input configurable for analogue input (auxiliary probe) or digital input (multi-purpose input)			
Digital outputs			
5 (4 for EVLJ224 and EVLJ234) with electro-mechanical relay			
Relay K1		SPST, 16 A res. @ 250 VAC	
Relay K2		SPST, 30 A res. @ 250 VAC in EVLJ225N9V3	
Relay K3		SPDT, 8 A res. @ 250 VAC	
Relay K4		SPST, 8 A res. @ 250 VAC	
Relay K5 (not available in EVLJ224 and EVLJ234)		SPST, 5 A res. @ 250 VAC	
The device guarantees double insulation between each digital output connector and the rest of the components of the device			
Type 1 or Type 2 Actions		Type 1	
Additional features of Type 1 or Type 2 actions		C	
Displays			
LED custom display, 3 digit, with function icons			
Alarm buzzer			
Incorporated sensors:		Bluetooth Low Energy (available in EVLJ234 and EVLJ235).	
Communications ports			
1 TTL MODBUS slave port for EVconnect APP or BMS.			

For EVLJ234 and EVLJ235 According to European R&TTE Declaration of Conformity this device can be used in the following Countries: Austria, Belgium, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Norway, Poland Portugal, Slovakia, Slovenia, Spain, Sweden, Switzerland, The Netherlands and The United Kingdom.

N.B.  
The device must be disposed of according to local regulations governing the collection of electrical and electronic waste.

This document and the solutions contained therein are the intellectual property of EVCO and thus protected by the Italian Intellectual Property Rights Code (CPI). EVCO imposes an absolute ban on the full or partial reproduction and disclosure of the content other than with the express approval of EVCO. The customer (manufacturer, installer or end-user) assumes all responsibility for the configuration of the device. EVCO accepts no liability for any possible errors in this document and reserves the right to make any changes, at any time without prejudice to the essential functional and safety features of the equipment.