

EVBOX Light JS200

Control solutions for cold rooms with remote moto-condensing unit



PLEASE READ CAREFULLY
and save this document
CONSIDER THE ENVIRONMENT


EN ENGLISH

- Degree of protection IP65.
- Power supply 115... 230 VAC.
- Cabinet probe and evaporator probe (PTC/NTC).
- Door switch input.
- Compressor relay 30 A res. @ 250VAC.
- Alarm buzzer.
- TTL MODBUS slave port for EVconnect APP or BMS.
- Direct connection to the load.


1 MEASUREMENTS AND INSTALLATION | Measurements in mm (inches)

1.1 User interface
To be fitted on-board, fixing screws not provided.

N.B.
To ensure the degree of protection IP65 of the whole covering, install the device using the appropriate holes only.

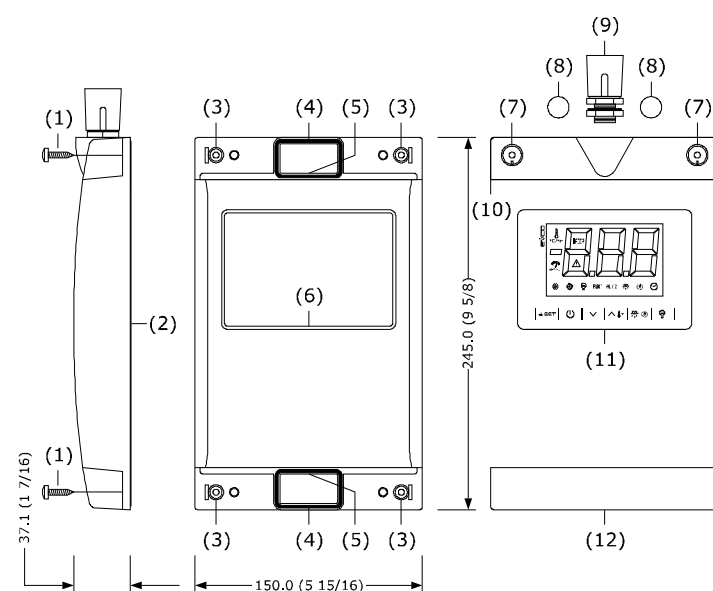


1. If the connecting cables come from above, drill a hole having a diameter suitable the cables to pass on the upper part of the container using the proper drilling lead (5); if vice versa the cables come from below, drill the hole on the lower part of the container. The maximum diameter of the hole must be 14.0 mm (9/16 in).
2. Make sure the gasket (2) is into the proper seat.
3. If the connecting cables come from above, fasten the container against the wall with 2 screws (1) using the proper holes on the lower part of the container (3); if vice versa the cables come from below, fasten the container using the holes on the upper part. Use cylindrical head screw.

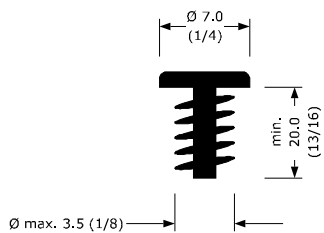

4. Screw the junction for rigid tube (9) to the cover cap (10).
5. Connect the user interface (11) to the control module as shown in the section **ELECTRICAL CONNECTION** getting the cables to pass through the proper hole (5) and through the junction for rigid tube (9).
6. Fasten the user interface (11) pushing it from the front into the proper seat (6).
7. Make sure the gaskets (4) are into the proper seats.
8. Fasten the cover caps (10) and (12) on the upper part and on the lower part of the container.
9. Fasten the container against the wall with 2 screws (1) using the proper holes (7) on the cover cap (10).
10. Fasten the coverscrew caps (8) into the proper holes (7) of the cover cap (10).

1.2 Control module

To be fitted on a DIN rail, in a control panel.



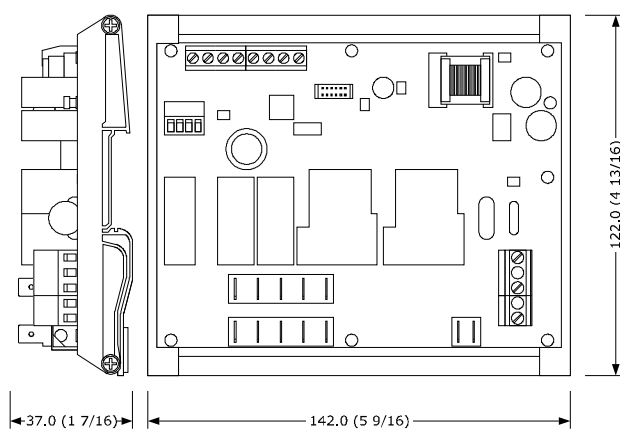


INSTALLATION PRECAUTIONS

- Ensure that the working conditions are within the limits stated in the **TECHNICAL SPECIFICATIONS** section.
- Do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks.
- Any metal parts close to the control module must be far enough away so as not to compromise the safety distance.
- In compliance with safety regulations, the device must be installed properly to ensure adequate protection from contact with electrical parts. All protective parts must be fixed in such a way as to need the aid of a tool to remove them.

2 ELECTRICAL CONNECTION

N.B.
- Use cables of an adequate section for the current running through them.
- To reduce any electromagnetic interference connect the power cables as far away as possible from the signal cables.

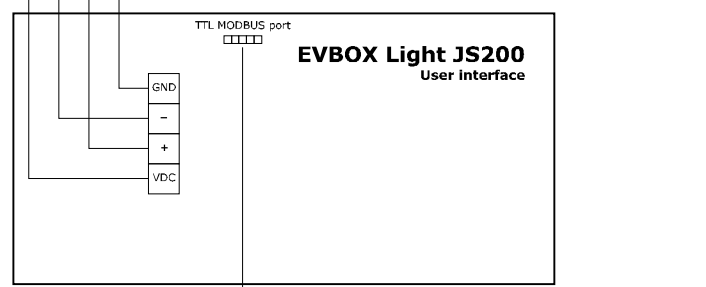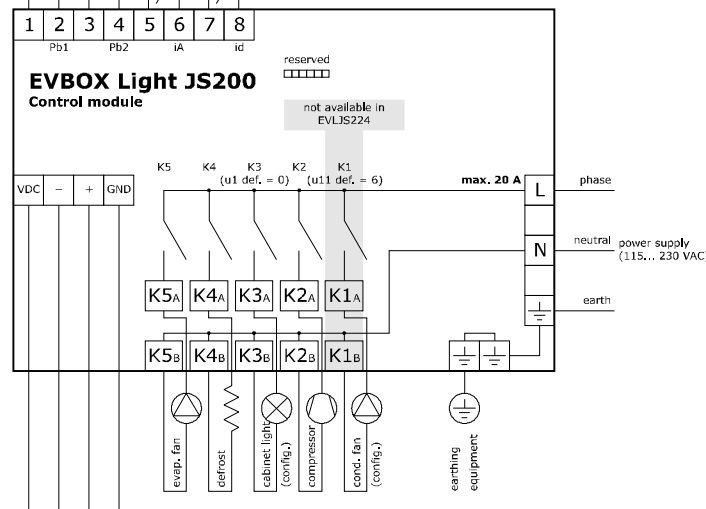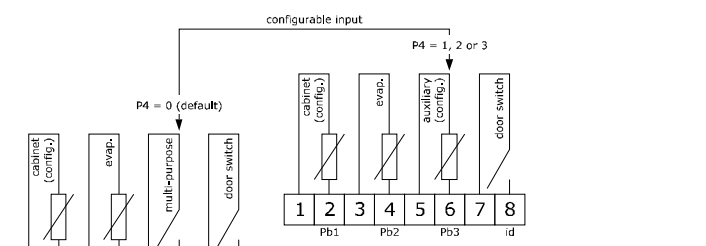

PRECAUTIONS FOR ELECTRICAL CONNECTION

- If using an electrical or pneumatic screwdriver, adjust the tightening torque.
- If the device has been moved from a cold to a warm place, the humidity may have caused condensat. to form inside. Wait about an hour before switching on the power.
- Make sure that the supply voltage, electrical frequency and power are within the set limits. See the section **TECHNICAL SPECIFICATIONS**.
- Disconnect the power supply before doing any type of maintenance.
- Do not use the device as safety device.
- For repairs and for further information, contact the EVCO sales network.


3 FIRST-TIME USE

1. Install following the instructions given in the section **MEASUREMENTS AND INSTALLATION**.
2. Connect the user interface to the control module as shown in the section **ELECTRICAL CONNECTION** without powering up the device.
3. Power up the device and an internal test will be run. The test normally takes a few seconds, when it is finished the display will switch off.
4. Configure the device as shown in the section **Setting configuration parameters**. Recommended configuration parameters for first-time use.

PAR.	DEF.	PARAMETER	MIN... MAX.
SP	0.0	setpoint	r1... r2
P0	1	probe type	0 = PTC 1 = NTC
P2	0	temperature unit of measurement	0 = °C 1 = °F
d1	0	defrost type	0 = electric 1 = hot gas 2 = compressor stopped

5. Then check that the remaining settings are appropriate; see the section **CONFIGURATION PARAMETERS**.
6. Disconnect the device from the mains.
7. Make the electrical connection as shown in the section **ELECTRICAL CONNECTION** without powering up the device.
8. For the connection in an RS-485 network connect the interface EVIF22TSX or EVIF23TSX, to activate real time functions connect the module EVIF23TSX, to use the device with the Android APP EVconnect connect the interface EVIF25TBX (EVlink); see the relevant instruction sheets. **If EVIF22TSX or EVIF23TSX is used, set parameter BLE to 0.**
9. Power up the device.

4 USER INTERFACE AND MAIN FUNCTIONS

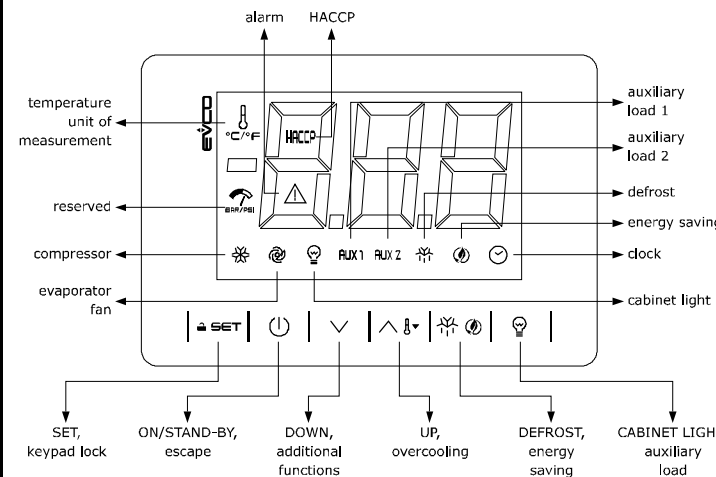

4.1 Switching the device on and off

1. If POF = 1 (default), touch the ON/STAND-BY key for 2s.
If the device is switched on, the display will show the P5 value ("cabinet temperature" default); if the display shows an alarm code, see the section **ALARMS**.

LED	ON	OFF	FLASHING
	compressor on	compressor off	- compressor protection active - setpoint being set
	evaporator fan on	evaporator fan off	evaporator fan stop active
	cabinet light on	cabinet light off	cabinet light on by digital input
AUX 1	auxiliary function 1 on	auxiliary function 1 off	- auxiliary function 1 on by digital input - auxiliary function 1 delay active
AUX 2	auxiliary function 2 on	auxiliary function 2 off	- auxiliary function 2 on by digital input - auxiliary function 2 delay active
	defrost or pre-drip active	-	- defrost delay active - dripping active
	- energy saving active - low consumption active	-	-
	view time	-	set date, time and day of the current week
	view temperature	-	quick cooling active
HACCP	saved HACCP alarm	-	new HACCP alarm saved
	alarm active	-	-

If Loc = 1 (default) and 30s have elapsed without the keys being pressed, the display will show the "Loc" label and the keypad will lock automatically.

4.2 Unlock keypad

Touch a key for 1s: the display will show the label "Unl".

4.3 Set the setpoint (if r3 = 0, default)

Check that the keypad isn't locked.

1. Touch the SET key.
2. Touch the UP or DOWN key within 15s to set the value within the limits r1 and r2 (default "-40... 50").
3. Touch the SET key (or do not operate for 15s).

4.4 Activate manual defrost

Check that the keypad isn't locked and that quick cooling isn't active.

1. Touch the DEFROST key for 2s.
If P3 = 1 (default), defrost is activated provided that the evaporator temperature is lower than the d2 threshold.

4.5 Cabinet light on/off (if u1 or u11 = 0, default)

1. Touch the CABINET LIGHT key.

4.6 Button-operated load on/off (if u1 or u11 = 2)

1. Touch the CABINET LIGHT key (for 2s if u1 or u11 = 0=).

If u1 or u11 = 1, the demisting switch on for the u6 duration.

4.7 Silence buzzer (if u9 = 1, default)

Touch a key.
If u1 or u11 = 3 and u4 = 1, the alarm output is deactivated.

5 ADDITIONAL FUNCTIONS

5.1 Activate/deactivate overcooling

Check that the keypad isn't locked and that defrosting isn't active.

1. Touch the UP key for 2s.
The setpoint becomes "setpoint - r6", for the r7 duration.

5.2 Activate/deactivate energy saving in manual mode

Check that the keypad isn't locked.

1. Touch the DEFROST key.
The setpoint becomes "setpoint + r4", at maximum for HE2 duration.

5.3 Activate the high or low humidity functions (if F0 = 5)

Check that the keypad isn't locked.

1. Touch the DOWN key for 1s.
2. Touch the UP or DOWN key within 15s to select the label "rH".
3. Touch the SET key for 2s until the display shows the right label for the function (only touch the key to see the function activated).

LAB.	DESCRIPTION
rhL	low humidity function (evaporator fan with F17 and F18 if the compressor is off, on if the compressor is on)
rhH	high humidity function (evaporator fan on)

4. Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

5.4 View/delete compressor functioning hours

Check that the keypad isn't locked.

1.		Touch the DOWN key for 1s.
2.		Touch the UP or DOWN key within 15s to select a label.
	LAB. DESCRIPTION	
	CH1	view compressor functioning hundreds of hours
	CH2	view second compressor functioning hundreds of hours (if u1 or u11 = 7)
	rCH	delete compressor and second compressor functioning hours
3.		Touch the SET key.
4.		Touch the UP or DOWN key to set "149" (to select rCH).
5.		Touch the SET key.
6.		Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

5.5 View the temperature detected by the probes

Check that the keypad isn't locked.

1.		Touch the DOWN key for 1s.
2.		Touch the UP or DOWN key within 15s to select a label.
	LAB. DESCRIPTION	
	Pb1	cabinet temperature (if P4 = 0, 1 or 2) inlet air temperature (if P4 = 3)
	Pb2	evaporator temperature (if P3 = 1 or 2)
	Pb3	auxiliary temperature (if P4 = 1, 2 or 3)
	Pb4	calculated product temperature (CPT; if P4 = 3)
3.		Touch the SET key.
4.		Touch the ON/STAND-BY key (or do not operate for 60s) to exit the procedure.

6 SETTINGS

6.1 Setting configuration parameters

1.		Touch the SET key for 4s: the display will show the label "PA".
2.		Touch the SET key.
3.		Touch the UP or DOWN key within 15s to set the PAS value (default "-19").
4.		Touch the SET key (or do not operate for 15s): the display will show the label "SP".
5.		Touch the UP or DOWN key to select a parameter.
6.		Touch the SET key.
7.		Touch the UP or DOWN key within 15s to set the value.
8.		Touch the SET key (or do not operate for 15s).
9.		Touch the SET key for 4s (or do not operate for 60s) to exit the procedure.

6.2 Set the date, time and day of the week (available with interface EVIF25TBX connected)

N.B.	- If the device is connected to the interface EVIF25TBX, do not disconnect the device from the mains within two minutes since the setting of the time and day of the week. - If the device communicates with the APP EVconnect, the date, time and day of the week will automatically be set by the smartphone or tablet.
------	--

Check that the keypad isn't locked.

1.		Touch the DOWN key for 1s.
2.		Touch the UP or DOWN key within 15s to select the label "rtc".
3.		Touch the SET key: the display will show the label "y" followed by the last two figures of the year.
4.		Touch the UP or DOWN key within 15s to set the year.
5.	Repeat actions 3 and 4 to set the next labels.	
	LAB. MEANING OF THE NUMBERS FOLLOWING THE LABEL	
	n	month (01... 12)
	d	day (01... 31)
	h	time (00... 23)
	n	minutes (00... 59)
6.		Touch the SET key: the display will show the label for the day of the week.
7.		Touch the UP or DOWN key within 15s to set the day of the week.
	LAB. DESCRIPTION	
	Mon	Monday
	tuE	Tuesday
	UEd	Wednesday
	thu	Thursday
	Fri	Friday
	Sat	Saturday
	Sun	Sunday
8.		Touch the SET key: the device will exit the procedure.
9.		Touch the ON/STAND-BY key to exit the procedure beforehand.

6.3 Reset the factory settings

N.B.	Check that the factory settings are appropriate; see the section CONFIGURATION PARAMETERS.
------	--

1.		Touch the SET key for 4s: the display will show the label "PA".
2.		Touch the SET key.
3.		Touch the UP or DOWN key within 15s to set "149".
4.		Touch the SET key (or do not operate for 15s): the display will show the label "dEF".
5.		Touch the SET key.
6.		Touch the UP or DOWN key within 15s to set "1".
7.		Touch the SET key (or do not operate for 15s).
8.	Interrupt the power supply to the device.	
9.		Touch the SET key for 2s before action 6 to exit the procedure beforehand.

7 CONFIGURATION PARAMETERS

N.	PAR.	DEF.	SETPOINT	MIN... MAX.
1	SP	0.0	setpoint	r1... r2
N.	PAR.	DEF.	ANALOGUE INPUTS	
2	CA1	0.0	cabinet probe offset	-25... 25 °C/°F if P4 = 3, air in probe offset

3	CA2	0.0	evaporator probe offset	-25... 25 °C/°F
4	CA3	0.0	auxiliary probe offset	-25... 25 °C/°F
5	P0	1	probe type	0 = PTC 1 = NTC
6	P1	1	enable °C decimal point	0 = no 1 = yes
7	P2	0	temperature unit of measurement	0 = °C 1 = °F
8	P3	1	evaporator probe function	0 = disabled 1 = defrost + fan 2 = fan
9	P4	0	configurable input function	0 = digital input 1 = condenser probe 2 = critical temperature probe 3 = air out probe if P4 = 3, regulation temperature = product temperature (CPT)
10	P5	0	value displayed	0 = regulation temperature 1 = setpoint 2 = evaporator temperature 3 = auxiliary temperature 4 = air in temperature
11	P7	50	inlet air weight for calculated product temperature (CPT)	0... 100 % CPT = {(P7 x (inlet air T)) + ((100 - P7) x (outlet air T)) : 100}
12	P8	5	display refresh time	0... 250 s : 10

N.	PAR.	DEF.	REGULATION	MIN... MAX.
13	r0	2.0	setpoint differential	1... 15 °C/°F
14	r1	-40	minimum setpoint	-99 °C/°F... r2
15	r2	50.0	maximum setpoint	r1... 199 °C/°F
16	r3	0	enable setpoint block	0 = no 1 = yes
17	r4	0.0	setpoint offset in energy saving	0... 99 °C/°F
18	r6	0.0	setpoint offset in overcooling	0... 99 °C/°F
19	r7	0	overcooling duration	0... 240 min
20	r12	1	position of the r0 differential	0 = asymmetric 1 = symmetric

N.	PAR.	DEF.	COMPRESSOR	MIN... MAX.
21	C0	0	compressor on delay after power-on	0... 240 min
22	C1	5	delay between 2 compressor switch-ons	0... 240 min
23	C2	3	compressor off minimum time	0... 240 min
24	C3	0	compressor on minimum time	0... 240 s
25	C4	10	compressor off time during cabinet probe alarm	0... 240 min
26	C5	10	compressor on time during cabinet probe alarm	0... 240 min
27	C6	80.0	threshold for high condensation warning	0... 199 °C/°F differential = 2 °C/4 °F
28	C7	90.0	threshold for high condensation alarm	0... 199 °C/°F
29	C8	1	high condensation alarm delay	0... 15 min
30	C10	0	compressor hours for service	0... 999 h x 100 0 = disabled
31	C11	10	second compressor switch-on delay	0... 240 s

N.	PAR.	DEF.	DEFROST	MIN... MAX.
32	d0	8	automatic defrost interval	0... 99 h 0 = only manual if d8 = 3, maximum interval
33	d1	0	defrost type	0 = electric 1 = hot gas 2 = compressor stopped
34	d2	2.0	threshold for defrost end	-99... 99 °C/°F
35	d3	30	defrost duration	0... 99 min se P3 = 1, maximum duration
36	d4	0	enable defrost at power-on	0 = no 1 = yes
37	d5	0	defrost delay after power-on	0... 99 min
38	d6	1	value displayed during defrost	0 = regulation temperature 1 = display locked 2 = dEF label
39	d7	2	dripping time	0... 15 min
40	d8	0	defrost interval counting mode	0 = device on hours 1 = compressor on hours 2 = hours evaporator temperature < d9 3 = adaptive 4 = real time

41	d9	0.0	evaporation threshold for automatic defrost interval counting	-99... 99 °C/°F
42	d11	0	enable defrost timeout alarm	0 = no 1 = yes
43	d15	0	compressor on consecutive time for hot gas defrost	0... 99 min
44	d16	0	pre-dripping time for hot gas defrost	0... 99 min
45	d18	40	adaptive defrost interval	0... 999 min if compressor on + evaporator temperature < d22 0 = only manual
46	d19	3.0	threshold for adaptive defrost (relative to optimal evaporation temperature)	0... 40 °C/°F optimal evaporation temperature - d19
47	d20	180	compressor on consecutive time for defrost	0... 999 min 0 = disabled
48	d21	200	compressor on consecutive time for defrost after power-on and overcooling	0... 500 min if (regulation temperature - setpoint) > 10 °C/20 °F 0 = disabled
49	d22	-2.0	evaporation threshold for adaptive defrost interval counting (relative to optimal evaporation temperature)	-10... 10 °C/°F optimal evaporation temperature + d22
50	d25	0	enable air out probe for defrost during evaporator probe alarm	0 = no 1 = yes
51	d26	6	defrost interval during evaporator probe alarm	0... 99 h 0 = only manual if d25 = 1

N.	PAR.	DEF.	ALARMS	MIN... MAX.
52	A0	0	select value for high/low temperature alarms	0 = regulation temperature 1 = evaporator temperature
53	A1	0.0	threshold for low temperature alarm	-99... 99 °C/°F
54	A2	0	low temperature alarm type	0 = disabled 1 = relative to setpoint 2 = absolute
55	A4	0.0	threshold for high temperature alarm	-99... 99 °C/°F
56	A5	0	high temperature alarm type	0 = disabled 1 = relative to setpoint 2 = absolute
57	A6	120	high temperature alarm delay after power-on	0... 240 min
58	A7	15	high/low temperature alarms delay	0... 240 min
59	A8	15	high temperature alarm delay after defrost	0... 240 min
60	A9	15	high temperature alarm delay after door closing	0... 240 min
61	A11	2.0	high/low temperature alarms reset differential	1... 15 °C/°F

N.	PAR.	DEF.	FANS	MIN... MAX.
62	F0	1	evaporator fan mode during normal operation	0 = off 1 = on 2 = on if compressor on 3 = thermoregulated (with regulation temperature + F1) 4 = thermoregulated (with regulation temperature + F1) if compressor on 5 = according to F6 6 = thermoregulated (with F1) 7 = thermoregulated (with F1) if compressor on
63	F1	-4.0	threshold for evaporator fan operation	-99... 99 °C/°F
64	F2	0	evaporator fan mode during defrost and dripping	0 = off 1 = on 2 = according to F0
65	F3	2	evaporator fan off maximum time	0... 15 min
66	F4	30	evaporator fan off time during energy saving	0... 240 s x 10 if F0 ≠ 5
67	F5	30	evaporator fan on time during energy saving	0... 240 s x 10 if F0 ≠ 5
68	F6	0	high/low humidity operation	0 = low humidity (with F17 and F18 if compressor off, on if compressor on) 1 = high humidity (on)
69	F7	5.0	threshold for evaporator fan on after dripping (relative to setpoint)	-99... 99 °C/°F setpoint + F7
70	F8	2.0	threshold for evaporator fan operation differential	1... 15 °C/°F
71	F9	10	evaporator fan off delay after compressor off	0... 240 s if F0 = 2 or 5
72	F10	1	condenser fan mode	0 = thermoregulated (with F11) 1 = thermoregulated (with F11) if compressor off, on if compressor on 2 = thermoregulated (with F11) if compressor off, on if compressor on, off during defrost, pre-dripping and dripping
73	F11	15.0	threshold for condenser fan on	0... 99 °C/°F differential = 2 °C/4 °F
74	F12	30	condenser fan off delay after compressor off	0... 240 s if P4 ≠ 1
75	F17	60	evaporator fan off time with low humidity	0... 240 s
76	F18	10	evaporator fan on time with low humidity	0... 240 s

N.	PAR.	DEF.	DIGITAL INPUTS	MIN... MAX.
77	i0	5	door switch input function	0 = disabled 1 = compressor + evaporator fan off 2 = evaporator fan off 3 = cabinet light on 4 = compressor + evaporator fan off, cabinet light on 5 = evaporator fan off + cabinet light on
78	i1	0	door switch input activation	0 = with contact closed 1 = with contact open
79	i2	30	open door alarm delay	-1... 120 min -1 = disabled
80	i3	15	regulation inhibition maximum time with door open	-1... 120 min -1 = until the closing
81	i4	0	enable open door alarm recording	0 = no 1 = yes if i2 ≠ -1 and after i2
82	i5	7	multi-purpose input function	0 = disabled 1 = energy saving 2 = IA alarm 3 = ISd alarm 4 = button-operated load on 5 = device on/off 6 = LP alarm 7 = C1t alarm 8 = C2t alarm
83	i6	0	multi-purpose input activation	0 = with contact closed 1 = with contact open
84	i7	0	multi-purpose input alarm delay	0... 120 min if i5 = 3 or 7, compressor on delay after alarm reset
85	i8	0	number of multi-purpose input activations for high pressure alarm	0... 15 0 = disabled if i5 = 3
86	i9	240	reset counter time for high pressure alarm	1... 999 min
87	i10	0	door closed consecutive time for energy saving	0... 999 min after regulation temperature < SP 0 = disabled
88	i13	180	number of door openings for defrost	0... 240 0 = disabled
89	i14	32	door open consecutive time for defrost	0... 240 min 0 = disabled

N.	PAR.	DEF.	DIGITAL OUTPUTS	MIN... MAX.
90	u1	0	auxiliary output configuration	0 = cabinet light 1 = demisting 2 = button-operated load 3 = alarm 4 = door heaters 5 = heater for neutral zone 6 = condenser fan 7 = second compressor 8 = on/stand-by
91	u2	0	enable cabinet light and button-operated load in stand-by	0 = no 1 = yes manual
92	u4	1	enable alarm output off silencing the buzzer	0 = no 1 = yes
93	u5	-1.0	threshold for door heaters on	-99... 99 °C/°F differential = 2 °C/4 °F
94	u6	5	demisting on duration	1... 120 min
95	u7	-5.0	neutral zone threshold for heating (relative to setpoint)	-99... 99 °C/°F differential = 2 °C/4 °F setpoint + u7
96	u9	1	enable alarm buzzer	0 = no 1 = yes
97	u11	0	auxiliary output 2 configuration (not available in EVLJS224)	0 = cabinet light 1 = demisting 2 = button-operated load 3 = alarm 4 = door heaters 5 = heater for neutral zone 6 = condenser fan 7 = second compressor 8 = on/stand-by
N.	PAR.	DEF.	REAL TIME CLOCK	MIN... MAX.
98	Hr0	0	enable clock	0 = no 1 = yes
N.	PAR.	DEF.	ENERGY SAVING	MIN... MAX.
99	HE2	0	energy saving maximum duration	0... 999 min

N.	PAR.	DEF.	REAL TIME ENERGY SAVING	MIN... MAX.
100	H01	0	energy saving time	0... 23 h
101	H02	0	energy saving maximum duration	0... 24 h
N.	PAR.	DEF.	REAL TIME DEFROST (if d8 = 4)	MIN... MAX.
102	Hd1	h-	1st daily defrost time	h- = disabled
103	Hd2	h-	2nd daily defrost time	h- = disabled
104	Hd3	h-	3rd daily defrost time	h- = disabled
105	Hd4	h-	4th daily defrost time	h- = disabled
106	Hd5	h-	5th daily defrost time	h- = disabled
107	Hd6	h-	6th daily defrost time	h- = disabled
N.	PAR.	DEF.	RESERVED	MIN... MAX.
108	Sd0	- - -	reserved	reserved
109	Sd1	- - -	reserved	reserved
110	Sd2	- - -	reserved	reserved
111	Sd3	- - -	reserved	reserved
112	Sd4	- - -	reserved	reserved
113	Sd5	- - -	reserved	reserved
N.	PAR.	DEF.	SAFETIES	MIN... MAX.
114	POF	1	enable ON/STAND-BY key	0 = no 1 = yes
115	Loc	1	enable keypad lock	0 = no 1 = yes
116	PAS	-19	password	-99... 999
117	PA1	426	level 1 password	-99... 999
118	PA2	824	level 2 password	-99... 999
N.	PAR.	DEF.	DATA-LOGGING EVLINK	MIN... MAX.
119	rE0	60	data-logger sampling interval	0... 240 min
120	rE1	4	recorded temperature	0 = none 1 = cabinet 2 = evaporator 3 = auxiliary 4 = cabinet and evaporator 5 = all
N.	PAR.	DEF.	MODBUS	MIN... MAX.
121	LA	247	MODBUS address	1... 247
122	Lb	2	MODBUS baud rate	0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud
123	LP	2	parity	0 = none 1 = odd 2 = even
N.	PAR.	DEF.	BLUETOOTH	MIN... MAX.
124	bLE	1	enable Bluetooth	0 = no 1 = yes

8 ALARMS

COD.	DESCRIPTION	RESET	TO CORRECT
Pr1	cabinet probe alarm	automatic	- check P0
Pr2	evaporator probe alarm	automatic	- check probe integrity
Pr3	auxiliary probe alarm	automatic	- check electrical connection
rtc	clock alarm	manual	set date, time and day of the week
AL	low temperature alarm	automatic	check A0, A1 and A2
AH	high temperature alarm	automatic	check A4 and A5
id	open door alarm	automatic	check i0 and i1
PF	power failure alarm	manual	- touch a key - check electrical connection
COH	high condensation warning	automatic	check C6
CSd	high condensation alarm	manual	- switch the device off and on - check C7
ia	multi-purpose input alarm	automatic	check i5 and i6
iSd	high pressure alarm	manual	- switch the device off and on - check i5, i6, i8, i9
LP	low pressure alarm	automatic	check i5 and i6
C1t	compressor thermal switch alarm	automatic	check i5 and i6
C2t	second compressor thermal switch alarm	automatic	check i5 and i6
dFd	defrost timeout alarm	manual	- touch a key - check d2, d3 and d11
- - -	user interface-control module communication alarm	manual	check electrical connection

9 TECHNICAL SPECIFICATIONS

Purpose of the control device		Function controller
Construction of the control device		Built-in electronic device
Container	User interface	White, self-extinguishing
	Control module	Open frame board on plastic support.
Category of heat and fire resistance		D
Measurements	User interface	150.0 x 245.0 x 37.1 mm (5 15/16 x 9 5/8 x 1 7/16 in)
	Control module:	142.0 x 122.0 x 37.0 mm (5 9/16 x 4 13/16 x 1 7/16 in)
Mounting methods for the control device	User interface	To be fitted on a DIN rail, in a control panel
	Control module	To be installed on an electrical switchboard
Degree of protection provided by the covering	User interface	IP65
	Control module	IP00
Connection method		
Plug-in screw terminal blocks for wires up to 1 mm ²	Fixed screw terminal blocks for wires up to 2.5 mm ²	Fixed screw terminal blocks for wires up to 5 mm ²
Faston, 6.3 mm	Pico-Blade connector	
Maximum permitted length for connection cables		
User-interface-control module: 20 m (65.6 ft)		
Power supply: 10 m (32.8 ft)	Analogue inputs: 10 m (32.8 ft)	
Digital inputs: 10 m (32.8 ft)	Digital outputs: 10 m (32.8 ft)	
Operating temperature	From 0 to 55 °C (from 32 to 131 °F)	
Storage temperature	From -25 to 70 °C (from -13 to 158 °F)	
Operating humidity	Relative humidity without condensate from 10 to 90%	
Pollution status of the control device	2	
Conformity		
RoHS 2011/65/CE	WEEE 2012/19/EU	REACH (EC) Regulation 1907/2006
EMC 2014/30/UE	LVD 2014/35/UE	
Power supply	115... 230 VAC (+10% -15%), 50/60 Hz (±3 Hz), max. 6 VA insulated	
Earthing methods for the control device		
With earth terminal		
Rated impulse-withstand voltage	2.5 KV	
Over-voltage category	II	
Software class and structure	A	
Analogue inputs		
2 for PTC or NTC probes (cabinet probe and evaporator probe)		
PTC probes	Sensor type	KTY 81-121 (990 Ω @ 25 °C, 77 °F)
	Measurement field	From -50 to 150 °C (from -58 to 302 °F)
	Resolution	0.1 °C (1 °F)
NTC probes	Sensor type	β3435 (10 K Ω @ 25 °C, 77 °F)
	Measurement field	From -40 to 105 °C (from -40 to 221 °F)
	Resolution	0.1 °C (1 °F)
Digital inputs		
1 dry contact (door switch)		
Dry contact	Contact type	5 VDC, 2 mA
	Power supply	None
	Protection	None
Other inputs	Input configurable for analogue input (auxiliary probe) or digital input (multi-purpose input)	
Digital outputs	5 (4 for EVLJS224) with electro-mechanical relay (compressor, defrost, evaporator fan, auxiliary relay 1 and auxiliary relay 2)	
Compressor relay (K2)	SPST, 30 A res. @ 250 VAC	

Defrost relay (K4)	SPST, 16 A res. @ 250 VAC
Evaporator fan relay (K5)	SPST, 8 A res. @ 250 VAC
Auxiliary relay 1 (K3)	SPST, 16 A res. @ 250 VAC
Auxiliary relay 2 (K1, not available in EVLJS224)	SPST, 30 A res. @ 250 VAC


The device guarantees double insulation between each digital output connector and the rest of the components of the device

Type 1 or Type 2 Actions	Type 1
Additional features of Type 1 or Type 2 actions	C

Displays	LED custom display, 3 digit, with function icons
----------	--

Alarm buzzer	Incorporated
--------------	--------------

Communications ports	1 TTL MODBUS slave port for EVconnect APP or BMS
----------------------	--

 N.B.
The device must be disposed of according to local regulations governing the collection of electrical and electronic waste.

This document and the solutions contained therein are the intellectual property of EVCO and thus protected by the Italian Intellectual Property Rights Code (CPI). EVCO imposes an absolute ban on the full or partial reproduction and disclosure of the content other than with the express approval of EVCO. The customer (manufacturer, installer or end-user) assumes all responsibility for the configuration of the device. EVCO accepts no liability for any possible errors in this document and reserves the right to make any changes, at any time without prejudice to the essential functional and safety features of the equipment.