

# EVS432 Digital controller for general purposes, with HACCP and Energy Saving functions


## ENGLISH 1 GETTING STARTED

### 1.1 Important



Read these instructions carefully before installing and using the instrument and follow all additional information for installation and electrical connection; keep these instructions close to the instrument for future consultations.

### 1.2 Installing the instrument

Panel mounting, with two screws Ø 2.9 mm (0.114 in) or M3; dimensions in mm (in).

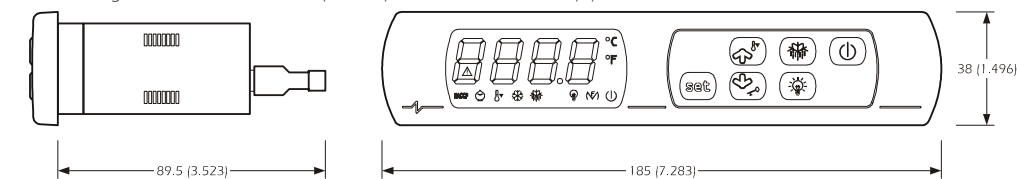

Independently on the kind of connections, the maximum depth is 89.5 mm (3.523 in) and refers to the models with faston (with straight female faston properly plugged).

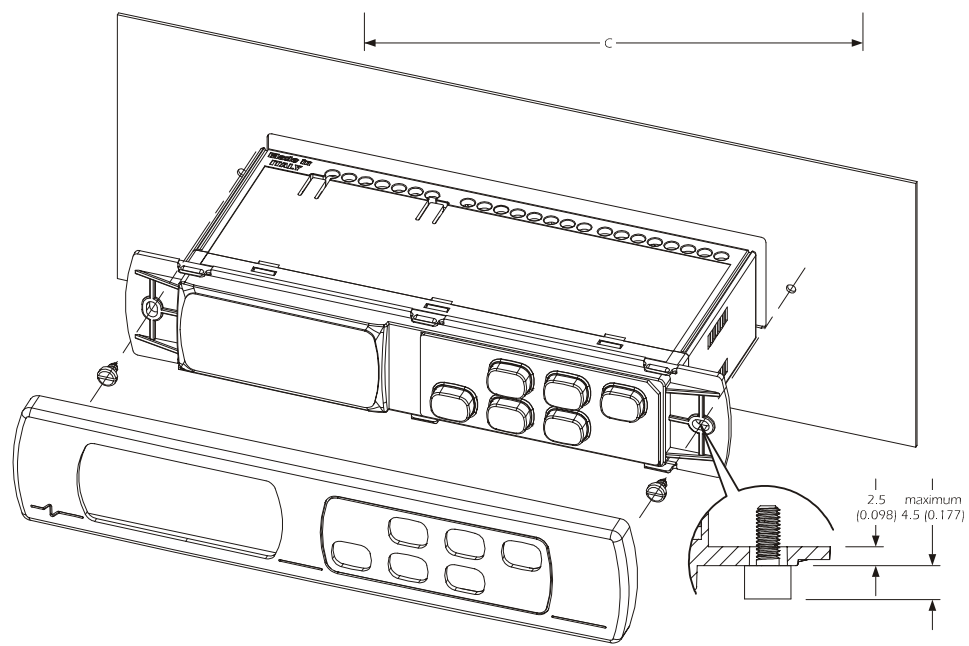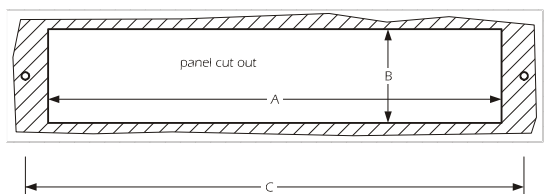

DIMENS.	MINIMUM	TYPICAL	MAXIMUM
A	150.0 (5.905)	150.0 (5.905)	150.5 (5.925)
B	31.0 (1.220)	31.0 (1.220)	31.5 (1.240)
C	164.0 (6.456)	165.0 (6.496)	166.0 (6.535)


Additional information for installation:

- moderate the clamping torque of the screws, in order not to damage the box
- working conditions (working temperature, humidity, etc.) must be between the limits indicated in the technical data
- do not install the instrument close to heating sources (resistances, hot air ducts, etc.), devices provided with big magnetos (big speakers, etc.), locations subject to direct sunlight, rain, humidity, dust, mechanical vibrations or bumps
- according to the safety norms, the protection against electrical parts must be ensured by a correct installation of the instrument; the parts that ensure the protection must be installed so that you can not remove them if not by using a tool.

### 1.3 Wiring diagram

With reference to the options in the outlines:

- the operation of the third input depends on parameter P4
- the user managed by the second output depends on parameter u1
- port 1 is the serial port for the communication with the supervision system (through a serial interface) or with the programming key (via TTL, with MODBUS communication protocol); **the port must not be used at the same time for the same purposes**
- port 2 is the serial port for the communication with the supervision system (via RS-485, with MODBUS communication protocol; by request); **port 2 must not be used at the same time to the same purpose of port 1**
- port 3 is the port for the communication with the remote indicator (by request; the indicator shows the quantity you have set with parameter P6).

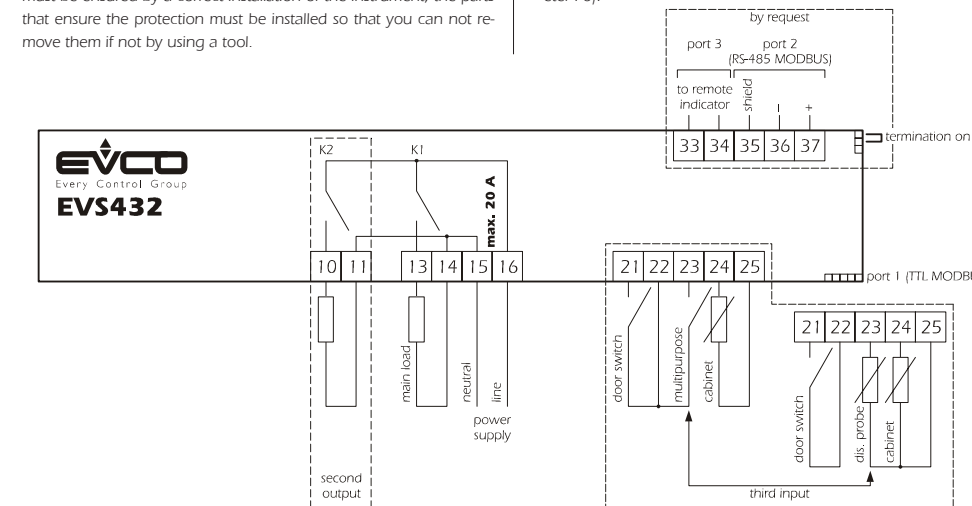

Additional information for electrical connection:

- do not operate on the terminal blocks with electrical or pneumatic screwdrivers

- if the instrument has been moved from a cold location to a warm one, the humidity could condense on the inside; wait about an hour before supplying it

- test the working power supply voltage, working electrical frequency and working electrical power of the instrument; they must correspond with the local power supply
- disconnect the local power supply before servicing the instrument
- do not use the instrument as safety device
- for repairs and information on the instrument please contact Evco sales network.

## 2 USER INTERFACE

### 2.1 Turning on/off the instrument by hand

- make sure the keyboard is not locked and no procedure is running
- press **[ON]** 2 s.

If the instrument is turned off, the regulators will be turned off; the possibility to turn on/off the cabinet light or the auxiliary output when the instrument is turned off depends on parameter u2. Turning off means turning off the instrument via software (the instrument remains connected with the power supply). Through the multipurpose input it is also possible to turn on/off the instrument at a distance.

### 2.2 The display

If the instrument is turned on, during the normal operation the display will show the quantity you have set with parameter P5:

- if P5 = 0, the display will show the cabinet temperature
- if P5 = 1, the display will show the working setpoint
- if P5 = 2 or 3, the display will show "----" (reserved options)
- if P5 = 4, the display will show the temperature read by the display probe (only if parameter P4 has value 1).

If the instrument is turned off, the display will be switched off.

### 2.3 Showing the cabinet temperature

- make sure the keyboard is not locked and no procedure is running
- press **[0]** 2 s: the display will show the first available label
- press **[<|>]** or **[<|>]** to select "Pb1"
- press **[OK]**

To quit the procedure:

- press **[OK]** or do not operate 15 s
- press **[ON]** or do not operate 60 s.

If during the normal operation the display shows the cabinet temperature (parameter P5 = 0), the label "Pb1" will not be shown.

### 2.4 Showing the temperature read by the display probe (only if parameter P4 has value 1)

- make sure the keyboard is not locked and no procedure is running
- press **[0]** 2 s: the display will show the first available label
- press **[<|>]** or **[<|>]** to select "Pb3"
- press **[OK]**

To quit the procedure:

- press **[OK]** or do not operate 15 s
- press **[ON]** or do not operate 60 s.

If the function of the third input is not the one of display probe (parameter P4 = 0, 2 or 3), the label "Pb3" will not be shown.

### 2.5 Activating the defrost by hand (only if parameter r7 has value 0)

- make sure the keyboard is not locked, no procedure is running and function Overcooling is not running
- press **[DEF]** 4 s.

### 2.6 Turning on/off the cabinet light by hand (only if parameter u1 has value 0)

- make sure no procedure is running
- press **[L]**

Through the door switch input and the multipurpose input it is also possible to turn on/off the cabinet light at a distance; also look at parameter u2.

### 2.7 Turning on the demisting resistances by hand (only if parameter u1 has value 1)

- make sure no procedure is running
- press **[R]** 2 s: the resistances will be turned on the time you will have set with parameter b1.

It is not allowed to turn off the demisting resistances by hand.

### 2.8 Turning on/off the auxiliary output by hand (only if parameter u1 has value 2)

- make sure the keyboard is not locked and no procedure is running
- press **[A]**

Through the multipurpose input it is also possible to turn on/off the auxiliary output at a distance.

If the auxiliary output has been turned on by hand, it will be allowed to turn it off only in the same way (analogous matter if the auxiliary output has been turned on at a distance); also look at parameter u2.

### 2.9 Activating/deactivating function Overcooling (quick cooling, only if parameter r7 has value 0)

- make sure the keyboard is not locked, no procedure is running and the defrost is not running
- press **[OC]** 4 s: the working setpoint will be increased of the temperature you will have set with parameter r5 (the time you will have set with parameter r6).

During function Overcooling the defrost is never activated; if the defrost interval expires when the function is running, the defrost will be activated to the end of the function.

### 2.10 Locking/unlocking the keyboard

- To lock the keyboard:
  - make sure no procedure is running
  - press **[L]** and **[ON]** 2 s: the display will show "Loc" 1 s.
- If the keyboard is locked, you will not be allowed to:
  - turn on/off the instrument by hand

- show the temperature read by the display probe
- activate the defrost by hand
- turn on/off the auxiliary output by hand
- activate/deactivate function Overcooling
- show the information on the HACCP alarms
- erase the HACCP alarms list
- modify the working setpoint with the procedure related in paragraph 5.1 (you also can modify the working setpoint through parameter SP).

These operations provoke the visualization of the label "Loc" 1 s.

To unlock the keyboard:

- press **[L]** and **[ON]** 2 s: the display will show "UnL" 1 s.

### 2.11 Silencing the buzzer


- make sure no procedure is running
- press a button (the first pressure of the button does not provoke its usual effect).

## 3 OPERATION


### 3.1 Preliminary information

The operation mainly depends on parameter r7.

### 3.2 Operation with parameter r7 = 0 (cooling action)

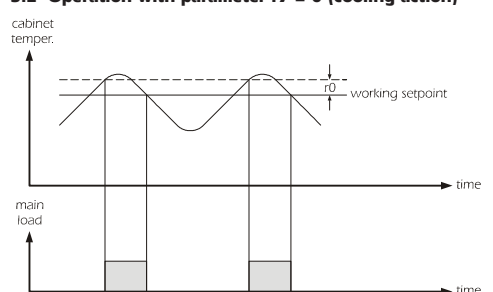

### 3.3 Operation with parameter r7 = 1 (heating action)

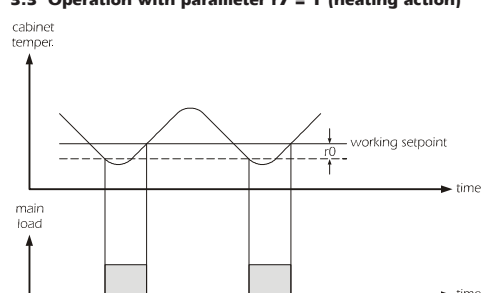

If parameter r7 has value 1 (heating action):

- the defrost functions will not be available
- the Energy Saving function will not be available
- the Overcooling function will not be available.

## 4 HACCP

### 4.1 Preliminary information

The instrument can store up to 3 HACCP alarms and supplies information on:

- the critical value
- the alarm duration (between 1 min and 99 h and 59 min, partial if the alarm is running).

CODE	KIND OF ALARM (AND CRITICAL VALUE)
AL	lower temperature alarm (the lowest temperature during a whatever alarm of this type)
AH	upper temperature alarm (the highest temperature during a whatever alarm of this type)
id	door switch input alarm (the highest cabinet temperature during a whatever alarm of this type); also look at parameter i4

### PAY ATTENTION:

- the instrument updates the information on the alarm on condition that the critical value of the new alarm is more critical than the one the instrument has stored or on condition that the information has already been shown
- the alarm duration refers to the one that has provoked the update of the critical value
- if the instrument is turned off, it will store no alarm.

### 4.2 Showing the information on the alarms

- make sure the keyboard is not locked and no procedure is running
- press **[0]** 2 s: the display will show the first available label
- press **[<|>]** or **[<|>]** to select "LS"
- press **[OK]** the display will show one of the codes related in the chart of paragraph 4.1

- press **[<|>]** or **[<|>]** to select a code, for example "AH"

To show the information on the alarm:

- press **[OK]** LED HACCP will stop flashing to remain lit up permanently and the display will show in succession (for example):

EXAMPLE	MEANING
8	the critical value is 8 °C/°F
dur	the display is about to show the alarm duration
h 1	the alarm has lasted 1 h (to be continued ...)
n15	the alarm has lasted 1 h and 15 min
AH	the code you had selected

Each information lasts 1 s.

To escape from the succession of information:

- press **[ON]** the display will show the code you had selected. To quit the procedure:
- press **[ON]** twice or do not operate 15 s.

### 4.3 Erasing the alarms list

- make sure the keyboard is not locked and no procedure is running
- press **[0]** 2 s: the display will show the first available label
- press **[<|>]** or **[<|>]** to select "rLS"
- press **[OK]**
- press **[<|>]** or **[<|>]** in 15 s to set "149"
- press **[OK]** or do not operate 15 s: the display will show "----" flashing 4 s and LED HACCP will go out, after which the instrument will quit the procedure.

## 5 SETTINGS

### 5.1 Setting the working setpoint

- make sure the instrument is turned on, the keyboard is not locked and no procedure is running
- press **[0]** LED **[0]** will flash
- press **[<|>]** or **[<|>]** in 15 s; also look at parameters r1, r2 and r3
- press **[OK]** or do not operate 15 s.

You also can modify the working setpoint through parameter SP.

### 5.2 Setting configuration parameters

To gain access the procedure:

- make sure no procedure is running
- press **[0]** and **[ON]** 4 s: the display will show "PA"
- press **[OK]**
- press **[<|>]** or **[<|>]** in 15 s to set "-19"
- press **[OK]** or do not operate 15 s
- press **[<|>]** and **[ON]** 4 s: the display will show "SP"

To select a parameter:

- press **[<|>]** or **[<|>]**

To modify a parameter:

- press **[OK]**
- press **[<|>]** or **[<|>]** in 15 s
- press **[OK]** or do not operate 15 s.

To quit the procedure:

- press **[<|>]** and **[ON]** 4 s or do not operate 60 s.

### Switch off/on the power supply of the instrument after the modification of the parameters.

### 5.3 Restoring the default value of configuration parameters

To gain access the procedure:

- make sure no procedure is running
- press **[0]** and **[ON]** 4 s: the display will show "PA"
- press **[OK]**
- press **[<|>]** or **[<|>]** in 15 s to set "743"
- press **[OK]** or do not operate 15 s
- press **[<|>]** and **[ON]** 4 s: the display will show "dEF"
- press **[OK]**
- press **[<|>]** or **[<|>]** in 15 s to set "149"
- press **[OK]** or do not operate 15 s: the display will show "dEF" flashing 4 s, after which the instrument will quit the procedure.

### Make sure the default value of the parameters is appropriate, in particular if the probes are NTC probes.

## 6 SIGNALS

### 6.1 Signals

LED	MEANING
	LED main load if it is lit, the main load will be turned on if it flashes: the modification of the working setpoint will be running a main load protection will be running (parameters C0, C1 and C2)
	LED defrost if it is lit, the defrost will be running
	LED cabinet light if it is lit, the cabinet light will have been turned on by hand if it flashes, cabinet light will have been turned on at a distance (parameter i0)
	LED multipurpose if parameter u1 has value 1 (or the user managed by the second output are the demisting resistances): if it is lit, the demisting resistances will be turned on because of the regulator (parameter b0) if it flashes, the demisting resistances will have been turned on by hand (parameter b1) if parameter u1 has value 2 (or the user managed by the second output is the auxiliary output): if it is lit, the auxiliary output will have been turned on by hand if it flashes, the auxiliary output will have been turned on at a distance (parameter i5)
	LED alarm if it is lit, an alarm will be running
	LED Overcooling if it is lit, function Overcooling will be running (parameters r5 and r6)
	LED Energy Saving if it is lit, function Energy Saving will be running (parameters r4 and i5)

## HACCP

LED HACCP  
if it is lit, the instrument will have stored one HACCP alarm at least and you will have already shown all the information on the alarms  
if it flashes, the instrument will have stored one HACCP alarm at least but you will not have shown all the information on the alarms

°C LED Celsius degree  
if it is lit, the unit of measure of the temperatures will be Celsius degree (parameter P2)

°F LED Fahrenheit degree  
if it is lit, the unit of measure of the temperatures will be Fahrenheit degree (parameter P2)

LED on/stand-by  
if it is lit, the instrument will be turned off

CODE MEANING

Loc the keyboard and/or the working setpoint are locked (parameter r3); also look at paragraph 2.10

---- the quantity to show is not available (for example because the probe is not enabled)

## 7 ALARMS

### 7.1 Alarms

CODE MEANING

AL Lower temperature alarm (HACCP alarm)  
Remedies:  
check the temperature joined to the alarm  
look at parameters A0, A1 and A2

Effects:  
if the critical value is lower than the one the instrument has stored, if you have already shown the information on the alarm or if the instrument has stored no alarm, the instrument will store the alarm

AH Upper temperature alarm (HACCP alarm)  
Remedies:  
check the temperature joined to the alarm  
look at parameters A3, A4 and A5

Effects:  
if the critical value is higher than the one the instrument has stored, if you have already shown the information on the alarm or if the instrument has stored no alarm, the instrument will store the alarm

id Door switch input alarm (HACCP alarm)  
Remedies:  
check the reasons that have provoked the activation of the input  
look at parameters i0, i1 and i4

Effects:  
the effect you have set with parameter i0; if parameter i4 has value 1 and the critical value is higher than the one the instrument has stored, if you have already shown the information on the alarm or if the instrument has stored no alarm, the instrument will store the alarm

iA Multipurpose input alarm (only if parameter P4 has value 3)  
Remedies:  
check the reasons that have provoked the activation of the input  
look at parameters i5 and i6

Effects:  
if parameter i5 has value 4, there will be no effect  
if parameter i5 has value 5, the main load will be turned off

isD Instrument locked alarm (only if parameter P4 has value 3)  
Remedies:  
check the reasons that have provoked the activation of the multipurpose input  
turn off/on the instrument or switch off/on its power supply  
look at parameters i5, i6, i7, i8 and i9

Effects:  
the regulators will be turned off

When the cause that has provoked the alarm disappears, the instrument restores the normal operation, except for the instrument locked alarm (code "isD") that needs you turn off/on the instrument or switch off/on its power supply.

## 8 INTERNAL DIAGNOSTICS

### 8.1 Internal diagnostics

CODE MEANING

Pr1 Cabinet probe error  
Remedies:  
look at parameter P0  
check the integrity of the probe  
check the connection instrument-probe  
check the cabinet temperature

Effects:  
the main load activity will depend on parameters C4 and C5

Pr3 Display probe error (only if parameter P4 has value 1)  
Remedies:  
the same you saw in the previous case but related to the display probe

Effects:

- no effect

When the cause that has provoked the alarm disappears, the instrument restores the normal operation.

## 9 TECHNICAL DATA

### 9.1 Technical data

**Box:** self-extinguishing grey.

**Frontal protection:** IP 65.

**Connections:** faston 6,3 mm (0.248 in) wide (power supply and outputs), screw terminal block (inputs), 6 poles connector (serial port); extractable terminal blocks or screw terminal blocks (power supply and outputs) by request.

**Working temperature:** from 0 to 55 °C (32 to 131 °F, 10 ... 90% of relative humidity without condensate).

**Power supply:** 230 Vac, 50/60 Hz, 3.5 VA; 115 Vac by request.

**Alarm buzzer:** by request.

**Measure inputs:** 1 (cabinet probe) for PTC/NTC probes.

**Digital inputs:** 1 (door switch) for NO/NC contact (free of voltage, 5 V 1 mA); third input configurable for measure input (display probe, for PTC/NTC probes) or digital input (multipurpose, free of voltage, 5 V 1 mA).

**Working range:** from -50 to 150 °C (-50 to 300 °F) for PTC probe, from -40 to 105 °C (-40 to 220 °F) for NTC probe.

**Resolution:** 0.1 °C/1 °C/1 °F.

**Relay outputs:** 2 relays:

• **main load relay:** 20 A @ 250 Vac (NO contact)

• **cabinet light/demisting resistances/auxiliary output relay:** 8 A @ 250 Vac (NO contact).

**The maximum current allowed on the loads is 20 A.**

**Serial port:** port for the communication with the supervision system (through a serial interface) or with the programming key (via TTL, with MODBUS communication protocol).

**Further communication ports (by request):** port for the communication with the supervision system (via RS-485, with MODBUS communication protocol), port for the communication with the remote indicator.

## 10 WORKING SETPOINTS AND CONFIGURATION PARAMETERS

### 10.1 Working setpoints

PARAM.	MIN.	MAX.	U.M.	DEF.	WORKING SETPOINTS
r1	r2		°C/°F (1)	0.0	working setpoint

### 10.2 Configuration parameters

PARAM.	MIN.	MAX.	U.M.	DEF.	WORKING SETPOINTS
SP	r1	r2	°C/°F (1)	0.0	working setpoint

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
CA1	-25.0	25.0	°C/°F (1)	0.0	cabinet probe offset
CA3	-25.0	25.0	°C/°F (1)	0.0	display probe offset (only if P4 = 1)

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
P0	0	1	---	0	kind of probe 0 = PTC 1 = NTC

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
P1	0	1	---	1	decimal point Celsius degree (for the quantity to show during the normal operation) 1 = YES

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
P2	0	1	---	0	unit of measure temperature (2) 0 = °C 1 = °F

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
P4	0	3	---	3	third input function 0 = input not enabled 1 = measure input (display probe) 2 = reserved 3 = digital input (multipurpose input)

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
P5	0	4	---	0	quantity to show during the normal operation 0 = cabinet temperature 1 = working setpoint 2 = reserved 3 = reserved 4 = temperature read by the display probe (only if P4 = 1)

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
P6	0	4	---	0	quantity shown by the remote indicator 0 = cabinet temperature 1 = working setpoint 2 = reserved 3 = reserved 4 = temperature read by the display probe (only if P4 = 1)

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
r0	0.1	15.0	°C/°F (1)	2.0	working setpoint differential
r1	-99.0	r2	°C/°F (1)	0.0	minimum working setpoint
r2	r1	{3}	°C/°F (1)	150.0	maximum working setpoint
r3	0	1	---	0	locking the working setpoint modification (with the procedure related in paragraph 5.1) 1 = YES

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
r4	0.0	99.0	°C/°F (1)	0.0	temperature increase during function Energy Saving (only if P4 = 3 and r7 = 0); also look at i5
r5	0.0	99.0	°C/°F (1)	0.0	temperature decrease during function Overcooling (only if r7 = 0); also look at r6
r6	0	99	min	30	duration of function Overcooling (only if r7 = 0); also look at r5
r7	0	1	---	1	cooling or heating action 0 = cooling

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
C0	0	240	min	0	main load delay since you turn on the instrument (4)
C1	0	240	min	0	minimum time between two activations in succession of the min load; also main load delay since the end of the cabinet probe error (5) (6)
C2	0	240	min	0	minimum time the main load remains turned off (5)
C3	0	240	s	0	minimum time the main remains turned on
C4	0	240	min	0	time the main load remains turned off during the cabinet probe error; also look at C5
C5	0	240	min	0	time the main load remains turned on during the cabinet probe error; also look at C4

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
d0	0	99	h	8	defrost interval; also look at d8 (8) 0 = the defrost at intervals will never be activated

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
d3	0	99	min	30	defrost duration 0 = the defrost will never be activated

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
d4	0	1	---	0	defrost when you turn on the instrument (4) 1 = YES

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
d5	0	99	min	0	defrost delay when you turn on the instrument (if d4 = 1); also look at i5 (4)

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
d6	0	1	---	1	temperature shown during the defrost 0 = cabinet temperature 1 = if to the defrost activation the cabinet temperature is below "working setpoint + r0"; at most "working setpoint + r0"; if to the defrost activation the cabinet temperature is above "working setpoint + r0", at most the cabinet temperature to the defrost activation (9)

PARAM.	MIN.	MAX.	U.M.	DEF.	MEASURE INPUTS
d8	0	1	---	0	kind of defrost interval 0 = the defrost will be activated when the instrument will have remained turned on the time d0 1 = the defrost will be activated when the main load will have remained turned on the time d0

PARAM.	MIN.	MAX.	U.M.	DEF.	ALARMS
A0	0	1	---	0	temperature joined to the lower temperature alarm 0 = cabinet temperature 1 = temperature read by the display probe (only if P4 = 1) (10)
A1	-99.0	{3}	°C/°F (1)	-10.0	temperature below which the lower temperature alarm is activated; also look at A0 and A2 (11)
A2	0	2	---	0	kind of lower temperature alarm 0 = alarm not enabled 1 = relative to the working setpoint (or "working setpoint - A1"; consider A1 without sign) 2 = absolute (or A1)
A3	0	1	---	0	temperature joined to the upper temperature alarm 0 = cabinet temperature 1 = temperature read by the display probe (only if P4 = 1) (10)
A4	-99.0	{3}	°C/°F (1)	10.0	temperature above which the upper temperature alarm is activated; also look at A3 and A5 (11)
A5	0	2	---	0	kind of upper temperature alarm 0 = alarm not enabled 1 = relative to the working setpoint (or "working setpoint + A4"; consider A4 without sign) 2 = absolute (or A4)
A6	0	240	min	120	upper temperature alarm delay since you turn on the instrument (4)
A7	0	240	min	15	temperature alarm delay
A8	0	240	min	15	upper temperature alarm delay since the end of the defrost (12)
A9	0	240	min	15	upper temperature alarm delay since the deactivation of the door switch input (13)

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i0	0	5	---	0	effect provoked by the activation of the door switch input; also look at i4 (14) 0 = no effect 1 = the cabinet light will be turned on (as long as the input will be deactivated) 2 = reserved 3 = the main load will be turned off (at most the time i3 or as long as the input will be deactivated) 4 = the cabinet light will be turned on (as long as the input will be deactivated) 5 = the main load will be turned off (at most the time i3 or as long as the input will be deactivated) and the cabinet light will be turned on (as long as the input will be deactivated)

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i1	0	1	---	0	kind of contact door switch input 0 = NO (the input will be active if you close the contact) 1 = NC (the input will be active if you open the contact)

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i2	-1	120	min	30	delay to signal the door switch input alarm -1 = no signal

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i3	-1	120	min	15	maximum duration of the effect provoked by the activation of the door switch input on the main load -1 = the effect will last as long as the input will be deactivated

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i4	0	1	---	0	storing the door switch input alarm (15) 1 = YES

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i5	0	7	---	0	effect provoked by the activation of the multipurpose input (only if P4 = 3) (16) 0 = no effect 1 = SYNCHRONIZING THE DEFROSTS - spent the time d5 the defrost will be activated (only if r7 = 0) 2 = ACTIVATING THE ENERGY SAVING - function Energy Saving will be activated (only if r7 = 0, as long as the input will be deactivated), on condition that function Overcooling is not running; also look at r4 3 = CLOSING THE LOCK - the cabinet light will be turned off (only if it will have been turned on by hand) and function Energy Saving will be activated (only if r7 = 0, as long as the input will be deactivated), on condition that function Overcooling is not running; also look at r4 4 = ACTIVATING THE EXTERNAL ALARM - spent the time i7 the display will show the code "IA" flashing and the buzzer will be activated (as long as the input will be deactivated) 5 = ACTIVATING THE MANOSTAT - the main load will be turned off, the display will show the code "IA" flashing and the buzzer will be activated (as long as the input will be deactivated); also look at i7, i8 and i9 6 = ACTIVATING THE AUXILIARY OUTPUT - the auxiliary output will be turned on (as long as the input will be deactivated) 7 = TURNING OFF THE INSTRUMENT - the instrument will be turned off (as long as the input will be deactivated)

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i6	0	1	---	0	kind of contact multipurpose input (only if P4 = 3) 0 = NO (the input will be active if you close the contact) 1 = NC (the input will be active if you open the contact)

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i7	0	120	min	0	if i5 = 4, delay to signal the multipurpose input alarm (only if P4 = 3) if i5 = 5, main load delay since the deactivation of the multipurpose input (only if P4 = 3) (17)

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i8	0	15	---	0	number of multipurpose input alarm such as to provoke instrument locked alarm (only if P4 = 3 and i5 = 5) 1 = alarm not enabled

PARAM.	MIN.	MAX.	U.M.	DEF.	DIGITAL INPUTS
i9	1	999	min	240	time without multipurpose input alarm in order that the alarm counter is cleared (only if P4 = 3 and i5 = 5)

PARAM.	MIN.	MAX.	U.M.	DEF.	OUTPUTS
u1	0	2	---	0	user managed by the second output (18) 0 = cabinet light 1 = demisting resistances 2 = auxiliary output

PARAM.	MIN.	MAX.	U.M.	DEF.	OUTPUTS
u2	0	1	---	0	possibility to turn on/off the cabinet light or the auxiliary output by hand when the instrument is turned off (19) 1 = YES

PARAM.	MIN.	MAX.	U.M.	DEF.	DEMISTING RESISTANCES (only if u1 = 1)
b0	-99.0	99.0	°C/°F (1)	-1.0	cabinet temperature above which the demisting resistances are turned off (only if the resistances have been turned on because of the regulator) (11)

PARAM.	MIN.	MAX.	U.M.	DEF.	DEMISTING RESISTANCES (only if u1 = 1)
b1	0	120	min	5	time the demisting resistances remain turned on (only if the resistances have been turned on by hand)

PARAM.	MIN.	MAX.	U.M.	DEF.	SERIAL NETWORK (MODBUS)
LA	1	247	---	247	instrument address

PARAM.	MIN.	MAX.	U.M.	DEF.	SERIAL NETWORK (MODBUS)
Lb	0	3	---	2	baud rate 0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud

PARAM.	MIN.	MAX.	U.M.	DEF.	ALARMS
LP	0	2	---	2	parity 0 = none 1 = odd 2 = even

(1) the unit of measure depends on parameter P2

(2) **set the parameters related to the regulators appropriately after the modification of the parameter**

(3) the value depends on parameter P2 (150.0 °C/300 °F)

(4) the parameter also has effect after an interruption of power supply that arises when the instrument is turned on

(5) the time you have set with the parameter is also counted when the instrument is turned off

(6) if parameter C1 has value 0, the delay since the end of the cabinet probe error will however be 2 min

(7) if parameter r7 has value 1 (heating action), the defrost functions will not be available

(8) the instrument stores the count of the defrost interval every 30 min; the modification of parameter d0 has effect since the end of the previous defrost interval or since the activation of a defrost by hand

(9) the display restores the normal operation as soon as the defrost ends and the cabinet temperature falls below the one that has locked the display (or if a temperature alarm arises)

(10) if parameter P4 has value 0, 2 or 3, the instrument will work as if the parameter had value 0 (but it will not store the alarm)

(11) the differential of the parameter is 2 °C/4 °F

(12) during the defrost the temperature alarms are not enabled

(13) during the activation of the door switch input the upper temperature alarm is not enabled, on condition that it has arisen during the activation of the input

(14) the main load is turned off spent 10 s since the activation of the input; if the input is activated during the defrost, the activation will provoke no effect on the main load

(15) the instrument stores the alarm spent the time you have set with parameter i2 since the input activation, on condition that the parameter has not value -1

(16) if parameter i5 has value 1, 2, 3, 6 or 7, the effect will not be signalled

(17) make sure the time you have set with parameter i7 is shorter than the one you have set with parameter i9

(18) to avoid damaging the connected user, modify the parameter when the instrument is turned off

(19) if parameter u2 has value 0, when you turn off the instrument the cabinet light or the auxiliary output will also be turned off; next time you turn on the instrument the user will be turned off.



The instrument must be disposed according to the local legislation about the collection for electrical and electronic equipment.