

EV3271/EV3281

Controllers for refrigerated units, with compressor protection against mains voltage fluctuations




E ENGLISH

- Controllers for normal temperature units
- Power supply 115... 230 VAC
- Cabinet probe (PTC/NTC/Pt 1000)
- Door switch/multi-purpose input
- Compressor relay rated 16 res. A @ 250 VAC (EV3271) or 30 res. A @ 250 VAC (EV3281)
- Compressor protection against mains voltage fluctuations
- Alarm buzzer
- TTL MODBUS slave port for EVconnect app, EPoCA remote monitoring system or for BMS
- Cooling or heating operation

1 MEASUREMENTS AND INSTALLATION

Measurements in mm (inches). To be fitted to a panel, snap-in brackets provided.

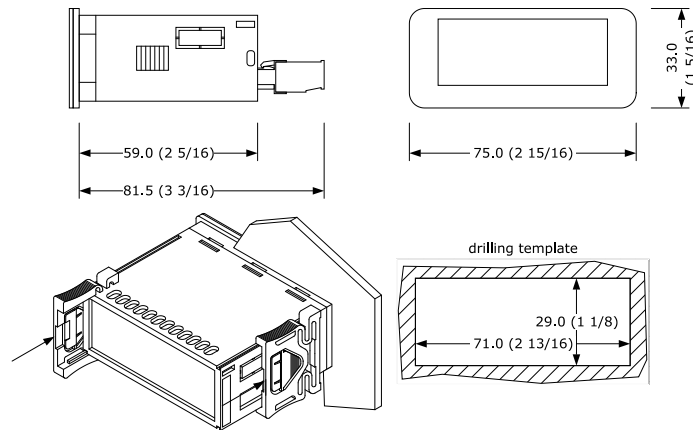


INSTALLATION PRECAUTIONS

- The thickness of the panel must be between 0.8 and 2.0 mm (1/32 and 1/16 in)
- Ensure that the working conditions are within the limits stated in the *TECHNICAL SPECIFICATIONS* section
- Do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks
- In compliance with safety regulations, the device must be installed properly to ensure adequate protection from contact with electrical parts. All protective parts must be fixed in such a way as to need the aid of a tool to remove them

2 ELECTRICAL CONNECTION

- N.B.
- Use cables of an adequate section for the current running through them
 - To reduce any electromagnetic interference connect the power cables as far away as possible from the signal cables

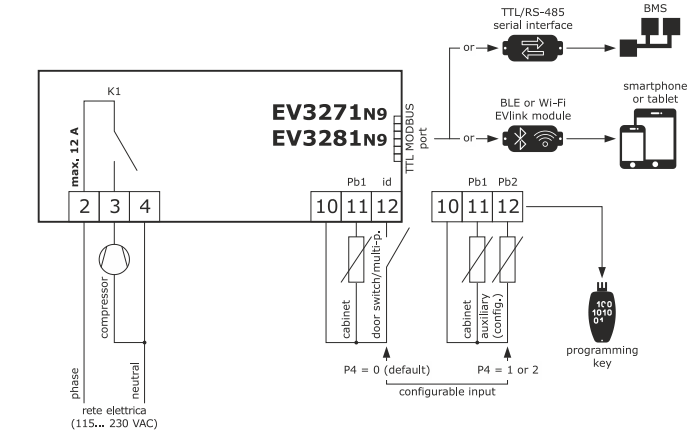

PRECAUTIONS FOR ELECTRICAL CONNECTION

- If using an electrical or pneumatic screwdriver, adjust the tightening torque
- If the device has been moved from a cold to a warm place, the humidity may have caused condensation to form inside. Wait about an hour before switching on the power
- Make sure that the supply voltage, electrical frequency and power are within the set limits. See the section *TECHNICAL SPECIFICATIONS*
- Disconnect the power supply before doing any type of maintenance
- Do not use the device as safety device
- For repairs and for further information, contact the EVCO sales network

3 FIRST-TIME


1. Install following the instructions given in the section *MEASUREMENTS AND INSTALLATION*.
2. Power up the device as shown in the section *ELECTRICAL CONNECTION* and an internal test will be run. The test normally takes a few seconds, when it is finished the display will switch off.
3. Configure the device as shown in the section *Setting configuration parameters*. Recommended configuration parameters for first-time use.

| PAR. | DEF. | PARAMETER | MIN... MAX. |
|------|------|---------------------------------|--|
| SP | 0.0 | setpoint | r1... r2 |
| P0 | 1 | probe type | 0 = PTC 1 = NTC 2 = Pt 1000 |
| P2 | 0 | temperature unit of measurement | 0 = °C 1 = °F |
| d1 | 0 | defrost type | 0 = electric 1 = hot gas 2 = compressor stopped |

Then check that the remaining settings are appropriate; see the section *CONFIGURATION PARAMETERS*.

4. Disconnect the device from the mains.
5. Make the electrical connection as shown in the section *ELECTRICAL CONNECTION* without powering up the device.
6. For the connection in an RS-485 network, connect the EVIF22TSX or EVIF23TSX interface. To activate real time functions, connect the EVIF23TSX module. To use the device with the app EVconnect, connect the EVIF25TBX interface. To use the device with the EPoCA remote monitoring system, connect the EVIF25TWX module. **If the EVIF22TSX or EVIF23TSX interface is used, set parameter bLE to 0.**
7. Power up the device.

4 USER INTERFACE AND MAIN FUNCTIONS

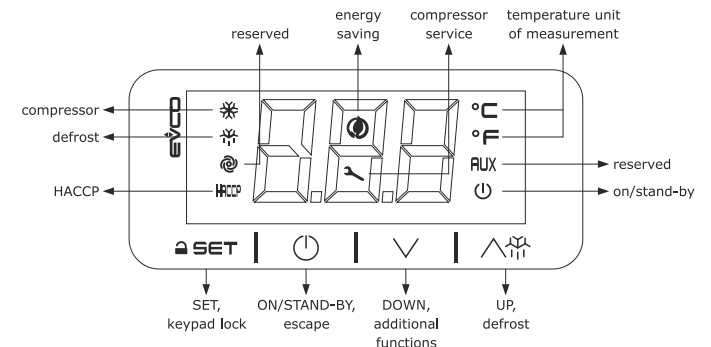

4.1 Switching the device on/off

1. If POF = 1, touch the ON/STAND-BY key for 4 s.

If the device is switched on, the display will show the P5 value ("cabinet temperature" default); if the display shows an alarm code, see the section *ALARMS*.

| LED | ON | OFF | FLASHING |
|-----|--------------------------------|----------------|---|
| | compressor on | compressor off | - compressor protection active - setpoint setting active |
| | defrost active | - | dripping active |
| | saved HACCP alarm in EVlink | - | - |
| | energy saving active | - | - |
| | request for compressor service | - | - settings active - access to additional functions active - operation with EVconnect APP active |
| | view temperature | - | overcooling or overheating active |
| | device off | device on | device on/off active |

If 30 s have elapsed without the keys being pressed, the display will show the "Loc" label and the keypad will lock automatically.

4.2 Unlock keypad

Touch a key for 1 s: the display will show the label "UnL".

4.3 Set the setpoint

Check that the keypad is not locked.

1. Touch the SET key.
2. Touch the UP or DOWN key within 15 s to set the value within the limits r1 and r2 (default "-50... 50")
3. Touch the SET key (or do not operate for 15 s).

4.4 Activate manual defrost (if r5 = 0, default)

Check that the keypad is not locked and that overcooling is not active.

1. Touch the UP key for 2 s.

If P4 = 1 (default), defrost is activated provided that the evaporator temperature is lower than the d2 threshold.

4.5 Silence buzzer

Touch a key.

5 ADDITIONAL FUNCTIONS

5.1 Activate/deactivate overcooling, overheating and manual energy saving

Check that the keypad is not locked.

1. Touch the DOWN key.

| FUNCTION | CONDITION | CONSEQUENCE |
|---------------|---------------------------------------|---|
| overcooling | r5 = 0, r8 = 1 and defrost not active | the setpoint becomes "setpoint - r6", for the r7 duration |
| overheating | r5 and r8 = 1 | the setpoint becomes "setpoint + r6", for the r7 duration |
| energy saving | r5 = 0 and r8 = 2 | the setpoint becomes "setpoint + r4", at maximum for HE2 duration |

5.2 View/delete compressor functioning hours and view compressor start-up number

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select a label.

| LAB. | DESCRIPTION |
|------|--|
| CH | view compressor functioning hours (hundreds) |
| rCH | delete compressor functioning hours |
| nS1 | compressor start-up number (thousands) |
3. Touch the SET key.
4. Touch the UP or DOWN key to set "149" (when label "rCH" is selected).
5. Touch the SET key.
6. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

5.3 View the temperature detected by the probes

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select a label.

| LAB. | DESCRIPTION |
|------|--|
| Pb1 | cabinet temperature |
| Pb2 | auxiliary temperature (if P4 = 1 or 2) |
3. Touch the SET key.
4. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

5.4 View the project number and the firmware revision

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select a label.

| LAB. | DESCRIPTION |
|------|----------------------------|
| PrJ | view the project number |
| rEU | view the firmware revision |
3. Touch the SET key.
4. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

5.4 View the mains voltage

Assicurarsi che la tastiera non sia bloccata.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select "uOL".
3. Touch the SET key.
4. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

6 SETTINGS

6.1 Setting configuration parameters

1. Touch the SET key for 4 s: the display will show the label "PA".
2. Touch the SET key.
3. Touch the UP or DOWN key within 15 s to set the PAS value (default "-19").
4. Touch the SET key (or do not operate for 15 s): the display will show the label "SP".
5. Touch the UP or DOWN key to select a parameter.
6. Touch the SET key.
7. Touch the UP or DOWN key within 15 s to set the value.
8. Touch the SET key (or do not operate for 15 s).
9. Touch the SET key for 4 s (or do not operate for 60 s) to exit the procedure.

6.2 Set the date, time and day of the week (available if EVIF23TSX, EVIF25TBX or EVIF25TWX module is connected)

| | |
|------|---|
| N.B. | - Do not disconnect the device from the mains within two minutes since the setting of the time and day of the week - if the device communicates with the EVconnect app, the date, time and day of the week will be automatically set by the smartphone or tablet |
|------|---|

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select the label "rtc".
3. Touch the SET key: the display will show the label "yy" followed by the last two figures of the year.
4. Touch the UP or DOWN key within 15 s to set the year.
5. Repeat actions 3. and 4. to set the next labels.

| LAB. | DESCRIPTION OF THE NUMBERS FOLLOWING THE LABEL |
|------|--|
| n | month (01... 12) |
| d | day (01... 31) |
| h | time (00... 23) |
| n | minute (00... 59) |

6. Touch the SET key: the display will show the label for the day of the week.
7. Touch the UP or DOWN key within 15 s to set the day of the week.

| LAB. | DESCRIPTION |
|------|-------------|
| Mon | Monday |
| tuE | Tuesday |
| UEd | Wednesday |
| thu | Thursday |
| Fri | Friday |
| Sat | Saturday |
| Sun | Sunday |

8. Touch the SET key: the device will exit the procedure.
9. Touch the ON/STAND-BY key to exit the procedure beforehand.

6.3 Restore the factory settings (default) and store customized settings as default

- N.B.
- Check that the factory settings are appropriate; see the section *CONFIGURATION PARAMETERS*.
 - the storing of customized settings overwrites the default.

1. Touch the SET key for 4 s: the display will show the label "PA".
2. Touch the SET key.
3. Touch the UP or DOWN key within 15 s to set the value.

| VAL. | DESCRIPTION |
|------|---|
| 149 | value to restore the factory settings (default) |
| 161 | value to store customized settings as default |

4. Touch the SET key (or do not operate for 15 s): the display will show the label "def" (when value "149" is set) or the label "MAP" (when value "161" is set).
5. Touch the SET key.
6. Touch the UP or DOWN key within 15 s to set "4".
7. Touch the SET key (or do not operate for 15 s): the display will show for 4 s "- -" flashing, then the device will exit the procedure.
8. Interrupt the power supply to the device.
9. Touch the SET key 2 s before action 6. to exit the procedure beforehand.

7 CONFIGURATION PARAMETERS

| N. | PAR. | DEF. | SETPOINT | MIN... MAX. |
|----|------|------|---------------------------------|--|
| 1 | SP | 0.0 | setpoint | r1... r2 |
| N. | PAR. | DEF. | ANALOGUE INPUTS | MIN... MAX. |
| 2 | CA1 | 0.0 | cabinet probe offset | -25... 25 °C/°F |
| 3 | CA2 | 0.0 | auxiliary probe offset | -25... 25 °C/°F |
| 4 | P0 | 1 | probe type | 0 = PTC 1 = NTC 2 = Pt 1000 |
| 5 | P1 | 1 | enable °C decimal point | 0 = no 1 = yes |
| 6 | P2 | 0 | temperature unit of measurement | 0 = °C 1 = °F |
| 7 | P4 | 1 | configurable input function | 0 = door switch/multi-purpose input 1 = evaporator probe 2 = condenser probe |
| 8 | P5 | 0 | value displayed | 0 = cabinet temperature 1 = setpoint 2 = auxiliary temperature |
| 9 | P8 | 5 | display refresh time | 0... 250 s : 10 |
| N. | PAR. | DEF. | REGULATION | MIN... MAX. |
| 10 | r0 | 2.0 | setpoint differential | 1... 15 °C/°F |
| 11 | r1 | -50 | minimum setpoint | -99 °C/°F... r2 |

| | | | | |
|----|-----|-------------|--|--|
| 12 | r2 | 50.0 | maximum setpoint | r1... 199 °C/°F |
| 13 | r4 | 0.0 | setpoint offset in energy saving | 0... 99 °C/°F |
| 14 | r5 | 0 | cooling or heating operation | 0 = cooling 1 = heating |
| 15 | r6 | 0.0 | setpoint offset in overcooling/overheating | 0... 99 °C/°F |
| 16 | r7 | 30 | overcooling/overheating duration | 0... 240 min |
| 17 | r8 | 0 | DOWN key additional function | 0 = disabled 1 = overcooling/overheating 2 = energy saving |
| 18 | r12 | 0 | position of the r0 differential | 0 = asymmetric 1 = symmetric |

| | | | | |
|----|------|-------------|---|--|
| N. | PAR. | DEF. | COMPRESSOR | MIN... MAX. |
| 19 | C0 | 0 | compressor on delay after power-on | 0... 240 min |
| 20 | C2 | 3 | compressor off minimum time | 0... 240 min 0 = protection against mains voltage fluctuations disabled |
| 21 | C3 | 0 | compressor on minimum time | 0... 240 s |
| 22 | C4 | 10 | compressor off time during cabinet probe alarm | 0... 240 min |
| 23 | C5 | 10 | compressor on time during cabinet probe alarm | 0... 240 min |
| 24 | C6 | 80.0 | threshold for high condensation warning | 0... 199 °C/°F differential = 2 °C/4 °F |
| 25 | C7 | 90.0 | threshold for high condensation alarm | 0... 199 °C/°F |
| 26 | C8 | 1 | high condensation alarm delay | 0... 15 min |
| 27 | C10 | 0 | compressor hours for service | 0... 999 h x 100 0 = disabled |
| 28 | C14 | 190 | mains voltage threshold below which the compressor is not switched on | 95... 260 V the device attempts to switch on every 30 s |
| 29 | C15 | 180 | mains voltage threshold below which the compressor is switched off | 95... 260 V if satisfied C17 time |
| 30 | C16 | 260 | mains voltage threshold above which the compressor is not switched on or switched off | 95... 260 V if satisfied C17 time the device attempts to switch on every 30 s |
| 31 | C17 | 5 | consecutive time the mains voltage lies outside the threshold C15 and C16 to force the compressor switch-off | 0... 60 s |
| 32 | C18 | 5 | consecutive number of failed compressor starts due to the mains voltage outside the thresholds C14 and C16 such as to cause the forced start-up of the compressor | 0... oo 0 = protection against mains voltage fluctuations disabled oo= the device never makes the forced start-up of the compressor the interruption of the power supply resets the count |

| | | | | |
|----|------|-------------|--|--|
| N. | PAR. | DEF. | DEFROST (if r5 = 0) | MIN... MAX. |
| 33 | d0 | 8 | automatic defrost interval | 0... 99 h 0 = only manual if d8 = 3, maximum interval |
| 34 | d2 | 8.0 | threshold for defrost end | -99... 99 °C/°F |
| 35 | d3 | 30 | defrost duration | 0... 99 min se P4 = 1, maximum duration |
| 36 | d4 | 0 | enable defrost at power-on | 0 = no 1 = yes |
| 37 | d5 | 0 | defrost dealy after power-on | 0... 99 min |
| 38 | d6 | 2 | value displayed during defrost | 0 = cabinet temperature 1 = display locked 2 = dEF label |
| 39 | d7 | 2 | dripping time | 0... 15 min |
| 40 | d8 | 0 | defrost interval counting mode | 0 = device on hours 1 = compressor on hours 2 = hours evaporator temperature < d9 3 = adaptive 4 = real time |
| 41 | d9 | 0.0 | evaporation threshold for automatic defrost interval counting | -99... 99 °C/°F |
| 42 | d11 | 0 | enable defrost timeout alarm | 0 = no 1 = yes |
| 43 | d18 | 40 | adaptive defrost interval | 0... 999 min if compressor on + evaporator temperature < d22 0 = only manual |
| 44 | d19 | 3.0 | threshold for adaptive defrost (relative to optimal evaporation temperature) | 0... 40 °C/°F optimal evaporation temperature - d19 |
| 45 | d20 | 180 | compressor on consecutive time for defrost | 0... 999 min 0 = disabled |
| 46 | d21 | 200 | compressor on consecutive time for defrost after power-on and overcooling | 0... 500 min if (cabinet temperature - setpoint) > 10°C/20 °F 0 = disabled |
| 47 | d22 | -2.0 | evaporation threshold for adaptive defrost interval counting (relative to optimal evaporation temperature) | -10... 10 °C/°F optimal evaporation temperature + d22 |


| | | | | |
|----|------|--------------|---|--|
| N. | PAR. | DEF. | ALARMS | MIN... MAX. |
| 48 | AA | 0 | select value for high/low temperature alarms | 0 = cabinet temperature 1 = auxiliary temperature |
| 49 | A1 | -10.0 | threshold for low temperature alarm | -99... 99 °C/°F |
| 50 | A2 | 1 | low temperature alarm type | 0 = disabled 1 = relative to setpoint 2 = absolute |
| 51 | A4 | 10.0 | threshold for high temperature alarm | -99... 99 °C/°F |
| 52 | A5 | 1 | high temperature alarm type | 0 = disabled 1 = relative to setpoint 2 = absolute |
| 53 | A6 | 12 | high temperature alarm delay after power-on | 0... 99 min x 10 |
| 54 | A7 | 15 | high/low temperature alarms delay | 0... 240 min |
| 55 | A8 | 15 | high temperature alarm delay after defrost | 0... 240 min |
| 56 | A9 | 15 | high temperature alarm delay after door closing | 0... 240 min |
| 57 | A10 | 10 | power failure duration for alarm recording | 0... 240 min |
| 58 | A11 | 2.0 | high/low temperature alarms reset differential | 1... 15 °C/°F |
| 59 | A13 | 0 | enable alarm buzzer | 0 = no 1 = yes |

| | | | | |
|----|------|------------|---|---|
| N. | PAR. | DEF. | DIGITAL INPUTS | MIN... MAX. |
| 60 | i0 | 5 | door switch/multi-purpose input function | 0 = disabled 1 = compressor 2 = reserved 3 = reserved 4 = reserved 5 = reserved 6 = reserved 7 = energy saving 8 = iA alarm 9 = device on/off 10= Cth alarm 11= th alarm |
| 61 | i1 | 0 | door switch/multi-purpose input activation | 0 = with contact closed 1 = with contact open |
| 62 | i2 | 30 | open door alarm delay | -1... 120 min -1 = disabled |
| 63 | i3 | 15 | regulation inhibition maximum time with door open | -1... 120 min -1 = until the closing |
| 64 | i7 | 0 | multi-purpose input alarm delay | -1... 120 min -1 = disabled if i0 = 10 or 11, compressor on delay after alarm reset |
| 65 | i10 | 0 | door closed consecutive time for energy saving | 0... 999 min after regulation temperature < SP 0 = disabled |
| 66 | i13 | 180 | number of door openings for defrost | 0... 240 0 = disabled |
| 67 | i14 | 32 | door open consecutive time for defrost | 0... 240 min 0 = disabled |
| 68 | HE2 | 0 | ENERGY SAVING (if r5 = 0) | MIN... MAX. 0... 999 min |
| 69 | H01 | 0 | REAL TIME ENERGY SAVING (if r5 = 0) | MIN... MAX. |
| 70 | H02 | 0 | energy saving time | 0... 23 h |
| 71 | HEd | 7 | energy saving duration | 0... 24 h |
| 72 | Hd1 | h- | energy saving day | 0 = Monday 1 = Tuesday 2 = Wednesday 3 = Thursday 4 = Friday 5 = Saturday 6 = Sunday 7 = none |
| 73 | Hd2 | h- | REAL TIME DEFROST (if d8 = 4) | MIN... MAX. |
| 74 | Hd3 | h- | 1st daily defrost time | h- = disabled |
| 75 | Hd4 | h- | 2nd daily defrost time | h- = disabled |
| 76 | Hd5 | h- | 3rd daily defrost time | h- = disabled |
| 77 | Hd6 | h- | 4th daily defrost time | h- = disabled |
| 78 | POF | 0 | 5th daily defrost time | h- = disabled |
| 79 | PAS | -19 | 6th daily defrost time | h- = disabled |
| 80 | PA1 | 426 | SAFETIES | MIN... MAX. 0 = no 1 = yes |
| 81 | PA2 | 824 | enable ON/STAND-BY key | 0 = no 1 = yes |
| 82 | PA1 | 426 | password | -99... 999 |
| 83 | PA2 | 824 | level 1 password | -99... 999 |
| 84 | rE0 | 15 | level 2 password | -99... 999 |
| 85 | rE1 | 3 | REAL TIME CLOCK | MIN... MAX. 0 = no 1 = yes |
| 86 | LA | 247 | enable clock | 0 = no 1 = yes |
| 87 | Lb | 2 | DATA-LOGGING EVLINK | MIN... MAX. 0 = free 1 = forced for EVconnect or EPoCA 2-99 = EPoCA local network address |
| 88 | LA | 247 | serial port configuration for connectivity | 0 = free 1 = forced for EVconnect or EPoCA 2-99 = EPoCA local network address |
| 89 | Lb | 2 | data-logger sampling interval | 0... 240 min |
| 90 | Lb | 2 | recorded temperature | 0 = none 1 = cabinet 2 = auxiliary 3 = all |
| 91 | LA | 247 | MODBUS | MIN... MAX. 1... 247 |
| 92 | Lb | 2 | MODBUS address | 1... 247 |
| 93 | Lb | 2 | MODBUS baud rate | 0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud parity even |

| 8 ALARMS | | | |
|-------------|--|------------------------------|--|
| COD. | DESCRIPTION | RESET | REMEDIES |
| Pr1 | cabinet probe alarm | automatic | - check P0 |
| Pr2 | auxiliary probe alarm | automatic | - check probe integrity - check electrical connection |
| rtc | clock alarm | manual | set date, time and day of the week |
| CO n | forced compressor start alarm | manual | - touch a key - check C18 |
| LU | compressor alarm not on or off due to low mains voltage | manual, automatic after 30 s | - touch a key - check C14 and C15 |
| HU | compressor alarm not on or off due to high mains voltage | manual, automatic after 30 s | - touch a key - check C16 |
| AL | low temperature alarm | automatic | check AA, A1 and A2 |
| AH | high temperature alarm | automatic | check AA, A4 and A5 |
| i d | open door alarm | automatic | check i0 e i1 |
| PF | power failure alarm | manual | - touch a key - check electrical connection |
| CO H | high condensation warning | automatic | check C6 |
| CS d | high condensation alarm | manual | - switch the device off and on - check C7 |
| iA | multi-purpose input alarm | automatic | check i0 and i1 |
| C th | compressor thermal switch alarm | automatic | check i0 and i1 |
| th | global thermal switch alarm | manual | - switch the device off and on - check i0 and i1 |
| dF d | defrost timeout alarm | manual | - touch a key - check d2, d3 and d11 |

| 9 TECHNICAL SPECIFICATIONS | | |
|---|---|---|
| Purpose of the control device | | Function controller |
| Construction of the control device | | Built-in electronic device |
| Container | | Black, self-extinguishing |
| Category of heat and fire resistance | | D |
| Measurements | | |
| 75.0 x 33.0 x 59.0 mm (2 15/16 x 1 5/16 x 2 5/16 in) with fixed screw terminal blocks | | 75.0 x 33.0 x 81.5 mm (2 15/16 x 1 5/16 x 3 3/16 in) with removable screw terminal blocks |
| Mounting methods for the control device | | To be fitted to a panel, snap-in brackets provided |
| Degree of protection provided by the covering | | IP65 (front) |
| Connection method | | |
| Fixed screw terminal blocks for wires up to 2,5 mm² | Removable screw terminal blocks for wires up to 2,5 mm²; by request | Micro-MaTch connector |
| Maximum permitted length for connection cables | | |
| Power supply: 10 m (32.8 ft) | | Analogue inputs: 10 m (32.8 ft) |
| Digital inputs: 10 m (32.8 ft) | | Digital outputs: 10 m (32.8 ft) |
| Operating temperature | | From 0 to 55 °C (from 32 to 131 °F) |
| Storage temperature | | From -25 to 70 °C (from -13 to 158 °F) |
| Operating humidity | | Relative humidity without condensate from 10 to 90% |
| Pollution status of the control device | | 2 |
| Conformity | | |

| | | | |
|---|-------------------|---|---------------------------------|
| RoHS 2011/65/CE | | WEEE 2012/19/EU | REACH (EC) Regulation 1907/2006 |
| EMC 2014/30/UE | | LVD 2014/35/UE | |
| Power supply | | 115... 230 VAC (+10 % -15%), 50/60 Hz (±3 Hz), max. 4 VA (EV3271) or 4.9 VA (EV3281) insulated | |
| Earthing methods for the control device | | None | |
| Rated impulse-withstand voltage | | 2.5 KV | |
| Over-voltage category | | II | |
| Software class and structure | | A | |
| Analogue inputs | | 1 for PTC, NTC or Pt 1000 probes (cabinet probe) | |
| PTC probes | Sensor type | KTY 81-121 (990 Ω @ 25 °C, 77 °F) | |
| | Measurement field | From -50 to 150 °C (from -58 to 302 °F) | |
| | Resolution | 0.1 °C (1 °F) | |
| NTC probes | Sensor type | B3435 (10 KΩ @ 25 °C, 77 °F) | |
| | Measurement field | From -40 to 105 °C (from -40 to 221 °F) | |
| | Resolution | 0.1 °C (1 °F) | |
| Pt 1000 probes | Measurement field | From -99 to 199 °C (from -146 to 390 °F) | |
| | Resolution | 0.1 °C (1 °F) | |
| Other inputs | | Input configurable for analogue input (auxiliary probe) or digital input (door switch/multi-purpose, dry contact) | |
| Dry contact | Contact type | 5 VDC, 1.5 mA | |
| | Power supply | None | |
| | Protection | None | |
| Digital outputs | | 1 electro-mechanical relay | |
| Compressor relay (K1) | | SPST, 16 A res. @ 250 VAC (EV3271) SPST, 30 A res. @ 250 VAC (EV3281) | |
| Type 1 or Type 2 Actions | | Type 1 | |
| Additional features of Type 1 or Type 2 actions | | C | |
| Displays | | 3 digits custom display, with function icons | |
| Alarm buzzer | | Incorporated | |
| Communication ports | | 1 TTL MODBUS slave port for EVconnect app, EPoCA remote monitoring system or for BMS | |

| | |
|---|--|
|  | N.B. The device must be disposed of according to local regulations governing the collection of electrical and electronic waste. |
|---|--|

This document and the solutions contained therein are the intellectual property of EVCO and thus protected by the Italian Intellectual Property Rights Code (CPI). EVCO imposes an absolute ban on the full or partial reproduction and disclosure of the content other than with the express approval of EVCO. The customer (manufacturer, installer or end-user) assumes all responsibility for the configuration of the device. EVCO accepts no liability for any possible errors in this document and reserves the right to make any changes, at any time without prejudice to the essential functional and safety features of the equipment.