

EV3273/EV3283

Controllers for refrigerated units, with compressor protection against mains voltage fluctuations




E ENGLISH

- Controllers for low temperature units
- Power supply 115... 230 VAC
- Cabinet probe and auxiliary probe (PTC/NTC)
- Door switch/multi-purpose input
- Compressor relay rated 16 res. A @ 250 VAC (EV3273) or 30 res. A @ 250 VAC (EV3283)
- Compressor protection against mains voltage fluctuations
- Alarm buzzer
- TTL MODBUS slave port for EVconnect app, EPoCA remote monitoring system or for BMS
- Cooling or heating operation

1 MEASUREMENTS AND INSTALLATION

Measurements in mm (inches). To be fitted to a panel, snap-in brackets provided.

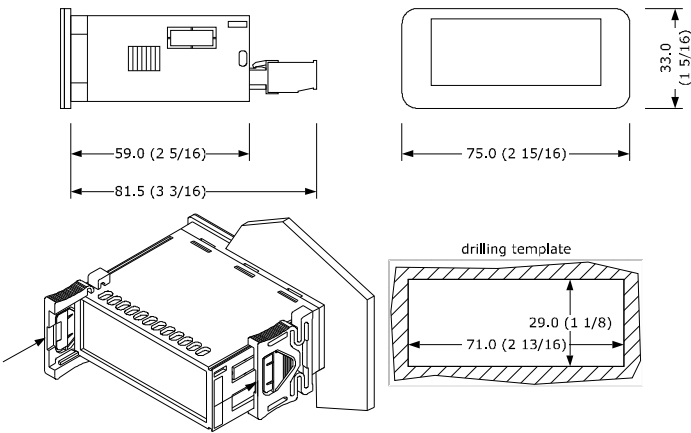


INSTALLATION PRECAUTIONS

- The thickness of the panel must be between 0.8 and 2.0 mm (1/32 and 1/16 in)
- Ensure that the working conditions are within the limits stated in the **TECHNICAL SPECIFICATIONS** section
- Do not install the device close to heat sources, equipment with a strong magnetic field, in places subject to direct sunlight, rain, damp, excessive dust, mechanical vibrations or shocks
- In compliance with safety regulations, the device must be installed properly to ensure adequate protection from contact with electrical parts. All protective parts must be fixed in such a way as to need the aid of a tool to remove them

2 ELECTRICAL CONNECTION

- N.B.
- Use cables of an adequate section for the current running through them
- To reduce any electromagnetic interference connect the power cables as far away as possible from the signal cables

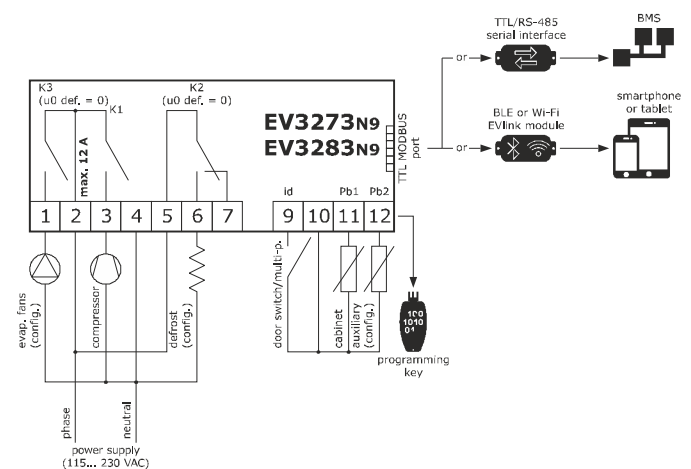

PRECAUTIONS FOR ELECTRICAL CONNECTION

- If using an electrical or pneumatic screwdriver, adjust the tightening torque
- If the device has been moved from a cold to a warm place, the humidity may have caused condensation to form inside. Wait about an hour before switching on the power
- Make sure that the supply voltage, electrical frequency and power are within the set limits. See the section **TECHNICAL SPECIFICATIONS**
- Disconnect the power supply before doing any type of maintenance
- Do not use the device as safety device
- For repairs and for further information, contact the EVCO sales network

3 FIRST-TIME


1. Install following the instructions given in the section **MEASUREMENTS AND INSTALLATION**.
2. Power up the device as shown in the section **ELECTRICAL CONNECTION** and an internal test will be run. The test normally takes a few seconds, when it is finished the display will switch off.
3. Configure the device as shown in the section **Setting configuration parameters**. Recommended configuration parameters for first-time use.

PAR.	DEF.	PARAMETER	MIN... MAX.
SP	0.0	setpoint	r1... r2
P0	1	probe type	0 = PTC 1 = NTC
P2	0	temperature unit of measurement	0 = °C 1 = °F
d1	0	defrost type	0 = electric 1 = hot gas 2 = compressor stopped

Then check that the remaining settings are appropriate; see the section **CONFIGURATION PARAMETERS**.

4. Disconnect the device from the mains.
5. Make the electrical connection as shown in the section **ELECTRICAL CONNECTION** without powering up the device.
6. For the connection in an RS-485 network, connect the EVIF22TSX or EVIF23TSX interface. To activate real time functions, connect the EVIF23TSX module. To use the device with the app EVconnect, connect the EVIF25TBX interface. To use the device with the EPoCA remote monitoring system, connect the EVIF25TWX module. **If the EVIF23TSX or EVIF23TSX interface is used, set parameter bLE to 0.**
7. Power up the device.

4 USER INTERFACE AND MAIN FUNCTIONS

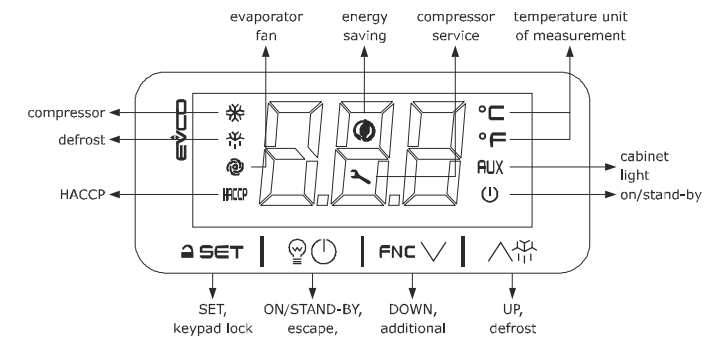

4.1 Switching the device on/off

1. If POF = 1, touch the ON/STAND-BY key for 4 s.
- If the device is switched on, the display will show the P5 value ("cabinet temperature" default); if the display shows an alarm code, see the section **ALARMS**.

LED	ON	OFF	FLASHING
	compressor on	compressor off	- compressor protection active - setpoint setting active
	defrost or pre-dripping active	-	- defrost delay active - dripping active
	evaporator fan on	evaporator fan off	evaporator fan stop active
HACCP	saved HACCP alarm in EVlink	-	-
	energy saving active	-	-
	request for compressor service	-	- settings active - access to additional functions active - operation with EVconnect APP active
°C/°F	view temperature	-	overcooling or overheating active
AUX	cabinet light on	cabinet light off	cabinet light on by digital input
	device off	device on	device on/off active

If 30 s have elapsed without the keys being pressed, the display will show the "Loc" label and the keypad will lock automatically.

4.2 Unlock keypad

Touch a key for 1 s: the display will show the label "UnL".

4.3 Set the setpoint

Check that the keypad is not locked.

1. Touch the SET key.
2. Touch the UP or DOWN key within 15 s to set the value within the limits r1 and r2 (default "-50... 50°")
3. Touch the SET key (or do not operate for 15 s).

4.4 Activate manual defrost (if r5 = 0, default)

Check that the keypad is not locked and that overcooling is not active.

1. Touch the UP key for 2 s.

If P4 = 1 (default), defrost is activated provided that the evaporator temperature is lower than the d2 threshold.

4.5 Cabinet light on/off (if u0 = 1, 2 or 3)

1. Touch the ON/STAND-BY key.

4.6 Silence buzzer

Touch a key.

5 ADDITIONAL FUNCTIONS

5.1 Activate/deactivate overcooling, overheating and manual energy saving

Check that the keypad is not locked.

1. Touch the DOWN key.

FUNCTION	CONDITION	CONSEQUENCE
overcooling	r5 = 0, r8 = 1 and defrost not active	the setpoint becomes "setpoint - r6", for the r7 duration
overheating	r5 and r8 = 1	the setpoint becomes "setpoint + r6", for the r7 duration
energy saving	r5 = 0 and r8 = 2	the setpoint becomes "setpoint + r4", at maximum for HE2 duration

5.2 View/delete compressor functioning hours and view compressor start-up number

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select a label.

LAB.	DESCRIPTION
CH	view compressor functioning hours (hundreds)
rCH	delete compressor functioning hours
nS1	compressor start-up number (thousands)

3. Touch the SET key.
4. Touch the UP or DOWN key to set "149" (when label "rCH" is selected).
5. Touch the SET key.
6. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

5.3 View the temperature detected by the probes

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select a label.

LAB.	DESCRIPTION
Pb1	cabinet temperature
Pb2	auxiliary temperature

3. Touch the SET key.
4. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

5.4 View the project number and the firmware revision

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
 2. Touch the UP or DOWN key within 15 s to select a label.
- | LAB. | DESCRIPTION |
|------|----------------------------|
| PrJ | view the project number |
| rEU | view the firmware revision |
3. Touch the SET key.
 4. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

5.4 View the mains voltage

Assicurarsi che la tastiera non sia bloccata.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select "UOL".
3. Touch the SET key.
4. Touch the ON/STAND-BY key (or do not operate for 60 s) to exit the procedure.

6 SETTINGS

6.1 Setting configuration parameters

1. Touch the SET key for 4 s: the display will show the label "PA".
2. Touch the SET key.
3. Touch the UP or DOWN key within 15 s to set the PAS value (default "-19").
4. Touch the SET key (or do not operate for 15 s): the display will show the label "SP".
5. Touch the UP or DOWN key to select a parameter.
6. Touch the SET key.
7. Touch the UP or DOWN key within 15 s to set the value.
8. Touch the SET key (or do not operate for 15 s).
9. Touch the SET key for 4 s (or do not operate for 60 s) to exit the procedure.

6.2 Set the date, time and day of the week (available if EVIF23TSX, EVIF25TBX or EVIF25TWX module is connected)

- N.B.
- Do not disconnect the device from the mains within two minutes since the setting of the time and day of the week
- If the device communicates with the EVconnect app, the date, time and day of the week will be automatically set by the smartphone or tablet

Check that the keypad is not locked.

1. Touch the DOWN key for 4 s.
2. Touch the UP or DOWN key within 15 s to select the label "rtc".
3. Touch the SET key: the display will show the label "yy" followed by the last two figures of the year.
4. Touch the UP or DOWN key within 15 s to set the year.
5. Repeat actions 3. and 4. to set the next labels.

LAB.	DESCRIPTION OF THE NUMBERS FOLLOWING THE LABEL
n	month (01... 12)
d	day (01... 31)
h	time (00... 23)
n	minute (00... 59)

6. Touch the SET key: the display will show the label for the day of the week.
7. Touch the UP or DOWN key within 15 s to set the day of the week.

LAB.	DESCRIPTION
Mon	Monday
tuE	Tuesday
UEd	Wednesday
thu	Thursday
Fri	Friday
Sat	Saturday
Sun	Sunday

8. Touch the SET key: the device will exit the procedure.
9. Touch the ON/STAND-BY key to exit the procedure beforehand.

6.3 Restore the factory settings (default) and store customized settings as default

- N.B.
- Check that the factory settings are appropriate: see the section **CONFIGURATION PARAMETERS**
- the storing of customized settings overwrites the default

1. Touch the SET key for 4 s: the display will show the label "PA".
2. Touch the SET key.
3. Touch the UP or DOWN key within 15 s to set the value.

VAL.	DESCRIPTION
149	value to restore the factory settings (default)
161	value to store customized settings as default

4. Touch the SET key (or do not operate for 15 s): the display will show the label "dEF" (when value "149" is set) or the label "MAP" (when value "161" is set).
5. Touch the SET key.
6. Touch the UP or DOWN key within 15 s to set "4".
7. Touch the SET key (or do not operate for 15 s): the display will show for 4 s "- - -" flashing, then the device will exit the procedure.
8. Interrupt the power supply to the device.
9. Touch the SET key 2 s before action 6. to exit the procedure beforehand.

7 CONFIGURATION PARAMETERS

N.	PAR.	DEF.	SETPOINT	MIN... MAX.
1	SP	0.0	setpoint	r1... r2
ANALOGUE INPUTS				
2	CA1	0.0	cabinet probe offset	-25... 25 °C/°F
3	CA2	0.0	auxiliary probe offset	-25... 25 °C/°F
4	PO	1	probe type	0 = PTC 1 = NTC
5	P1	1	enable °C decimal point	0 = no 1 = yes
6	P2	0	temperature unit of measurement	0 = °C 1 = °F
7	P4	1	auxiliary probe function	0 = disabled 1 = evaporator probe (defrost + fan) 2 = evaporator probe (fan) 3 = condenser probe
8	P5	0	value displayed	0 = cabinet temperature 1 = setpoint 2 = auxiliary temperature
9	P8	5	display refresh time	0... 250 s : 10
REGULATION				
10	r0	2.0	setpoint differential	1... 15 °C/°F
11	r1	-50	minimum setpoint	-99 °C/°F... r2
12	r2	50.0	maximum setpoint	r1... 199 °C/°F
13	r4	0.0	setpoint offset in energy saving	0... 99 °C/°F
14	r5	0	cooling or heating operation	0 = cooling 1 = heating
15	r6	0.0	setpoint offset in overcooling/overheating	0... 99 °C/°F
16	r7	30	overcooling/overheating duration	0... 240 min
17	r8	0	DOWN key additional function	0 = disabled 1 = overcooling/overheating 2 = energy saving
18	r12	0	position of the r0 differential	0 = asymmetric 1 = symmetric
COMPRESSOR				
19	CO	0	compressor on delay after power-on	0... 240 min
20	C2	3	compressor off minimum time	0... 240 min 0 = protection against mains voltage fluctuations disabled
21	C3	0	compressor on minimum time	0... 240 s
22	C4	10	compressor off time during cabinet probe alarm	0... 240 min
23	C5	10	compressor on time during cabinet probe alarm	0... 240 min
24	C6	80.0	threshold for high condensation warning	0... 199 °C/°F differential = 2 °C/4 °F
25	C7	90.0	threshold for high condensation alarm	0... 199 °C/°F
26	C8	1	high condensation alarm delay	0... 15 min
27	C10	0	compressor hours for service	0... 999 h x 100 0 = disabled
28	C14	190	mains voltage threshold below which the compressor is not switched on	95... 260 V the device attempts to switch on every 30 s
29	C15	180	mains voltage threshold below which the compressor is switched off	95... 260 V if satisfied C17 time
30	C16	260	mains voltage threshold above which the compressor is not switched on or switched off	95... 260 V if satisfied C17 time the device attempts to switch on every 30 s
31	C17	5	consecutive duration of the permanence of the mains voltage outside the thresholds C15 and C16 due to the compressor being switched off	0... 60 s
32	C18	5	consecutive number of failed compressor starts due to the mains voltage outside the thresholds C14 and C16 such as to cause the forced start-up of the compressor	0... oo 0 = protection against mains voltage fluctuations disabled oo = the device never makes the forced start-up of the compressor the interruption of the power supply resets the count
DEFROST (if r5 = 0)				
33	d0	8	automatic defrost interval	0... 99 h 0 = only manual if d8 = 3, maximum interval
34	d1	0	defrost type	0 = electric 1 = hot gas 2 = compressor stopped
35	d2	8.0	threshold for defrost end	-99... 99 °C/°F
36	d3	30	defrost duration	0... 99 min se P4 = 1, maximum duration
37	d4	0	enable defrost at power-on	0 = no 1 = yes
38	d5	0	defrost delay after power-on	0... 99 min
39	d6	2	value displayed during defrost	0 = cabinet temperature 1 = display locked 2 = dEF label
40	d7	2	dripping time	0... 15 min
41	d8	0	defrost interval counting mode	0 = device on hours 1 = compressor on hours 2 = hours evaporator temperature < d9 3 = adaptive 4 = real time
42	d9	0.0	evaporation threshold for automatic defrost interval counting	-99... 99 °C/°F
43	d11	0	enable defrost timeout alarm	0 = no 1 = yes
44	d15	0	compressor on consecutive time for hot gas defrost	0... 99 min
45	d16	0	pre-dripping time for hot gas defrost	0... 99 min
46	d18	40	adaptive defrost interval	0... 999 min if compressor on + evaporator temperature < d22 0 = only manual
47	d19	3.0	threshold for adaptive defrost (relative to optimal evaporation temperature)	0... 40 °C/°F optimal evaporation temperature - d19
48	d20	180	compressor on consecutive time for defrost	0... 999 min 0 = disabled
49	d21	200	compressor on consecutive time for defrost after power-on and overcooling	0... 500 min if (cabinet temperature - setpoint) > 10°C/20 °F 0 = disabled
50	d22	-2.0	evaporation threshold for adaptive defrost interval counting (relative to optimal evaporation temperature)	-10... 10 °C/°F optimal evaporation temperature + d22
ALARMS				
51	AA	0	select value for high/low temperature alarms	0 = cabinet temperature 1 = auxiliary temperature
52	A1	-10.0	threshold for low temperature alarm	-99... 99 °C/°F
53	A2	1	low temperature alarm type	0 = disabled 1 = relative to setpoint 2 = absolute

54	A4	10.0	threshold for high temperature alarm	-99... 99 °C/°F
55	A5	1	high temperature alarm type	0 = disabled 1 = relative to setpoint 2 = absolute
56	A6	12	high temperature alarm delay after power-on	0... 99 min x 10
57	A7	15	high/low temperature alarms delay	0... 240 min
58	A8	15	high temperature alarm delay after defrost	0... 240 min
59	A9	15	high temperature alarm delay after door closing	0... 240 min
60	A10	10	power failure duration for alarm recording	0... 240 min
61	A11	2.0	high/low temperature alarms reset differential	1... 15 °C/°F
62	A13	0	enable alarm buzzer	0 = no 1 = yes
63	F0	3	evaporator fan mode during normal operation	0 = off 1 = on 2 = according to F15 and F16 if compressor off, on if compressor on 3 = thermoregulated (with F1) 4 = thermoregulated (with F1) if compressor on
64	F1	-1.0	threshold for evaporator fan operation	-99... 99 °C/°F differential = 2 °C/4 °F
65	F2	0	evaporator fan mode during defrost and dripping	0 = off 1 = on 2 = according to F0
66	F3	2	evaporator fan off maximum time	0... 15 min
67	F4	0	evaporator fan off time during energy saving	0... 240 s x 10
68	F5	10	evaporator fan on time during energy saving	0... 240 s x 10
69	F7	5.0	threshold for evaporator fan on after dripping (relative to setpoint)	-99... 99 °C/°F setpoint + F7
70	F9	0	evaporator fan off delay after compressor off	0... 240 s if F0 = 2
71	F15	0	evaporator fan off time with compressor off	0... 240 s if F0 = 2
72	F16	1	evaporator fan on time with compressor off	0... 240 s if F0 = 2
DIGITAL INPUTS				
73	i0	5	door switch/multi-purpose input function	0 = disabled 1 = compressor + evaporator fan off 2 = evaporator fan off 3 = cabinet light on 4 = compressor + evaporator fan off, cabinet light on 5 = evaporator fan off, cabinet light on 6 = reserved 7 = energy saving 8 = iA alarm 9 = device on/off 10 = cth alarm 11 = th alarm
74	i1	0	door switch/multi-purpose input activation	0 = with contact closed 1 = with contact open
75	i2	30	open door alarm delay	-1... 120 min -1 = disabled
76	i3	15	regulation inhibition maximum time with door open	-1... 120 min -1 = until the closing
77	i7	0	multi-purpose input alarm delay	-1... 120 min -1 = disabled if i0 = 10 or 11, compressor on delay after alarm reset
78	i10	0	door closed consecutive time for energy saving	0... 999 min after regulation temperature < SP 0 = disabled
79	i13	180	number of door openings for defrost	0... 240 0 = disabled
80	i14	32	door open consecutive time for defrost	0... 240 min 0 = disabled
DIGITAL OUTPUTS				
81	u0	0	K2 and K3 output configuration	0 = K2 defrost K3 evaporator fan 1 = K2 cabinet light K3 evaporator fan 2 = K2 cabinet light K3 defrost 3 = K2 defrost K3 cabinet light
82	u2	0	enable cabinet light and button-operated load in stand-by	0 = no 1 = yes manual
ENERGY SAVING (if r5 = 0)				
83	HE2	0	energy saving maximum duration	0... 999 min
REAL TIME ENERGY SAVING (if r5 = 0)				
84	H01	0	energy saving time	0... 23 h
85	H02	0	energy saving duration	0... 24 h
86	HEd	7	energy saving day	0 = Monday 1 = Tuesday 2 = Wednesday 3 = Thursday 4 = Friday 5 = Saturday 6 = Sunday 7 = none
REAL TIME DEFROST (if d8 = 4)				
87	Hd1	h-	1st daily defrost time	h- = disabled
88	Hd2	h-	2nd daily defrost time	h- = disabled
89	Hd3	h-	3rd daily defrost time	h- = disabled
90	Hd4	h-	4th daily defrost time	h- = disabled
91	Hd5	h-	5th daily defrost time	h- = disabled
92	Hd6	h-	6th daily defrost time	h- = disabled
SAFETIES				
93	POF	0	enable ON/STAND-BY key	0 = no 1 = yes
94	PAS	-19	password	-99... 999
95	PA1	426	level 1 password	-99... 999
96	PA2	824	level 2 password	-99... 999
REAL TIME CLOCK				
97	Hr0	0	enable clock	0 = no 1 = yes
DATA-LOGGING EVLINK				
98	BLE	1	serial port configuration for connectivity	0 = free 1 = forced for EVconnect or EPoCA 2-99 = EPoCA local network address
99	rE0	15	data-logger sampling interval	0... 240 min
100	rE1	3	recorded temperature	0 = none 1 = cabinet 2 = auxiliary 3 = all
MODBUS				
101	LA	247	MODBUS address	1... 247
102	Lb	2	MODBUS baud rate	0 = 2,400 baud 1 = 4,800 baud 2 = 9,600 baud 3 = 19,200 baud parity even

8 ALARMS			
COD.	DESCRIPTION	RESET	REMEDIES
Pr1	cabinet probe alarm	automatic	- check P0
Pr2	auxiliary probe alarm	automatic	- check probe integrity - check electrical connection
rtc	clock alarm	manual	set date, time and day of the week
COon	forced compressor start alarm	manual	- touch a key - check C18
LU	compressor alarm not on or off due to low mains voltage	manual, automatic after 30 s	- touch a key - check C14 and C15
HU	compressor alarm not on or off due to high mains voltage	manual, automatic after 30 s	- touch a key - check C16
AL	low temperature alarm	automatic	check AA, A1 and A2
AH	high temperature alarm	automatic	check AA, A4 and A5
id	open door alarm	automatic	check i0 e i1
PF	power failure alarm	manual	- touch a key - check electrical connection
COH	high condensation warning	automatic	check C6
CSd	high condensation alarm	manual	- switch the device off and on - check C7
IA	multi-purpose input alarm	automatic	check i0 and i1
Cth	compressor thermal switch alarm	automatic	check i0 and i1
th	global thermal switch alarm	manual	- switch the device off and on - check i0 and i1
dFd	defrost timeout alarm	manual	- touch a key - check d2, d3 and d11

9 TECHNICAL SPECIFICATIONS			
Purpose of the control device		Function controller	
Construction of the control device		Built-in electronic device	
Container		Black, self-extinguishing	
Category of heat and fire resistance		D	
Measurements			
75.0 x 33.0 x 59.0 mm (2 15/16 x 1 5/16 x 2 5/16 in) with fixed screw terminal blocks		75.0 x 33.0 x 81.5 mm (2 15/16 x 1 5/16 x 3 3/16 in) with removable screw terminal blocks	
Mounting methods for the control device: To be fitted to a panel, snap-in brackets provided			
Degree of protection provided by the covering: IP65 (front)			
Connection method			
Fixed screw terminal blocks for wires up to 2,5 mm ²		Removable screw terminal blocks for wires up to 2,5 mm ² ; by request	
Micro-MaTch connector			
Maximum permitted length for connection cables			
Power supply: 10 m (32.8 ft)		Analogue inputs: 10 m (32.8 ft)	
Digital inputs: 10 m (32.8 ft)		Digital outputs: 10 m (32.8 ft)	
Operating temperature		From 0 to 55 °C (from 32 to 131 °F)	
Storage temperature		From -25 to 70 °C (from -13 to 158 °F)	
Operating humidity		Relative humidity without condensate from 10 to 90%	
Pollution status of the control device: 2			
Conformity			
RoHS 2011/65/CE		WEEE 2012/19/EU	
		REACH (EC) Regulation 1907/2006	
EMC 2014/30/UE		LVD 2014/35/UE	
Power supply: 115... 230 VAC (+10 % -15%), 50/60 Hz (±3 Hz), max. 4 VA (EV3273) or 4.9 VA (EV3283) insulated			
Earthing methods for the control device: None			
Rated impulse-withstand voltage: 2.5 KV			
Over-voltage category: II			
Software class and structure: A			
Analogue inputs: 2 for PTC or NTC probes (cabinet probe and auxiliary probe)			
PTC probes	Sensor type		KTY 81-121 (990 Ω @ 25 °C, 77 °F)
	Measurement field		From -50 to 150 °C (from -58 to 302 °F)
NTC probes	Resolution		0.1 °C (1 °F)
	Sensor type		B3435 (10 KΩ @ 25 °C, 77 °F)
NTC probes	Measurement field		From -40 to 105 °C (from -40 to 221 °F)
	Resolution		0.1 °C (1 °F)
Digital inputs: 1 dry contact (door switch/multi-purpose)			
Dry contact		Contact type: 5 VDC, 1.5 mA	
		Power supply: None	
		Protection: None	
Digital outputs: 3 electro-mechanical relays			
Relay K1		SPST, 16 A res. @ 250 VAC (EV3273)	
Relay K2		SPST, 30 A res. @ 250 VAC (EV3283)	
Relay K3		SPDT, 8 A res. @ 250 VAC	
Type 1 or Type 2 Actions		SPST, 5 A res. @ 250 VAC	
Additional features of Type 1 or Type 2 actions: Type 1			
Displays: 3 digits custom display, with function icons			
Alarm buzzer: Incorporated			
Communication ports: 1 TTL MODBUS slave port for EVconnect app, EPoCA remote monitoring system or for BMS			
N.B. The device must be disposed of according to local regulations governing the collection of electrical and electronic waste.			
This document and the solutions contained therein are the intellectual property of EVCO and thus protected by the Italian Intellectual Property Rights Code (CPI). EVCO imposes an absolute ban on the full or partial reproduction and disclosure of the content other than with the express approval of EVCO. The customer (manufacturer, installer or end-user) assumes all responsibility for the configuration of the device. EVCO accepts no liability for any possible errors in this document and reserves the right to make any changes, at any time without prejudice to the essential functional and safety features of the equipment.			